

EF 109L/16 K Cat. 2024 Garden tractor



Документы

Mulching Kit

Mowing deck

Engine

Tank

Transmission

Frame

Front axle

Steering arm

Rear axle

Seat

Cutting plate lifting


Electrical parts

body

Towing hitch

Labels


www.agrodialog.ru

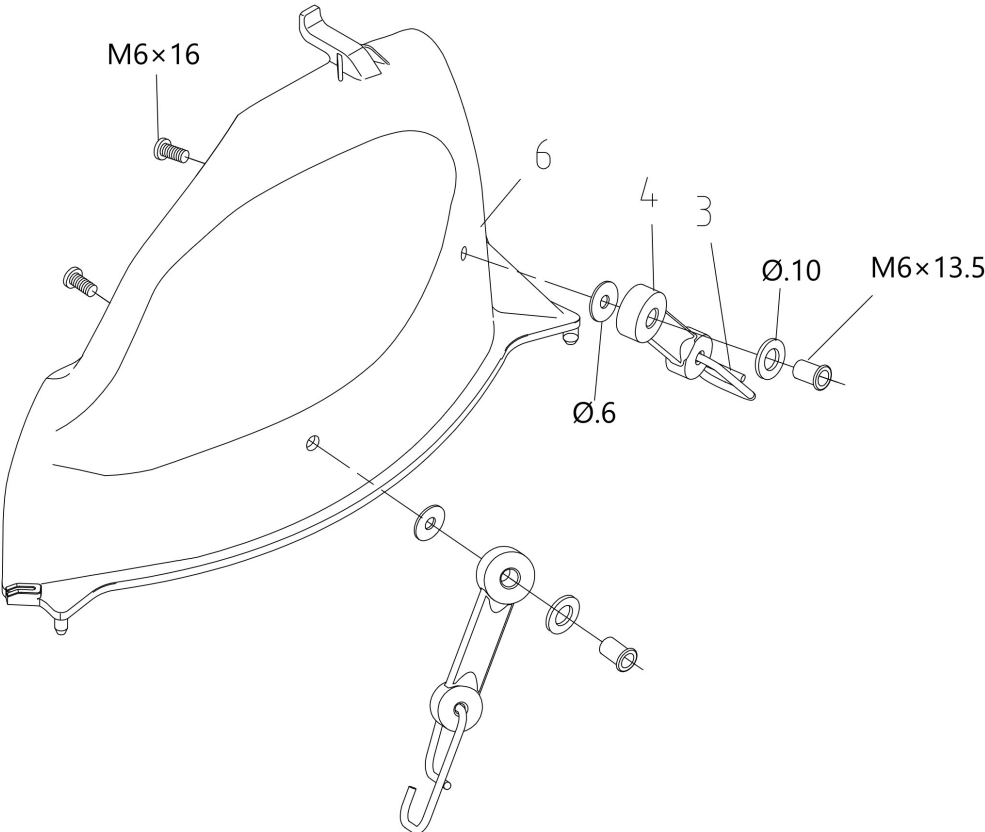

www.agrodialog.ru


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
3	2	TS000043R	Hook				
4	2	TS000044R	Tie rod				
6	1	TS000046R	Deflector				

www.agrodialog.ru

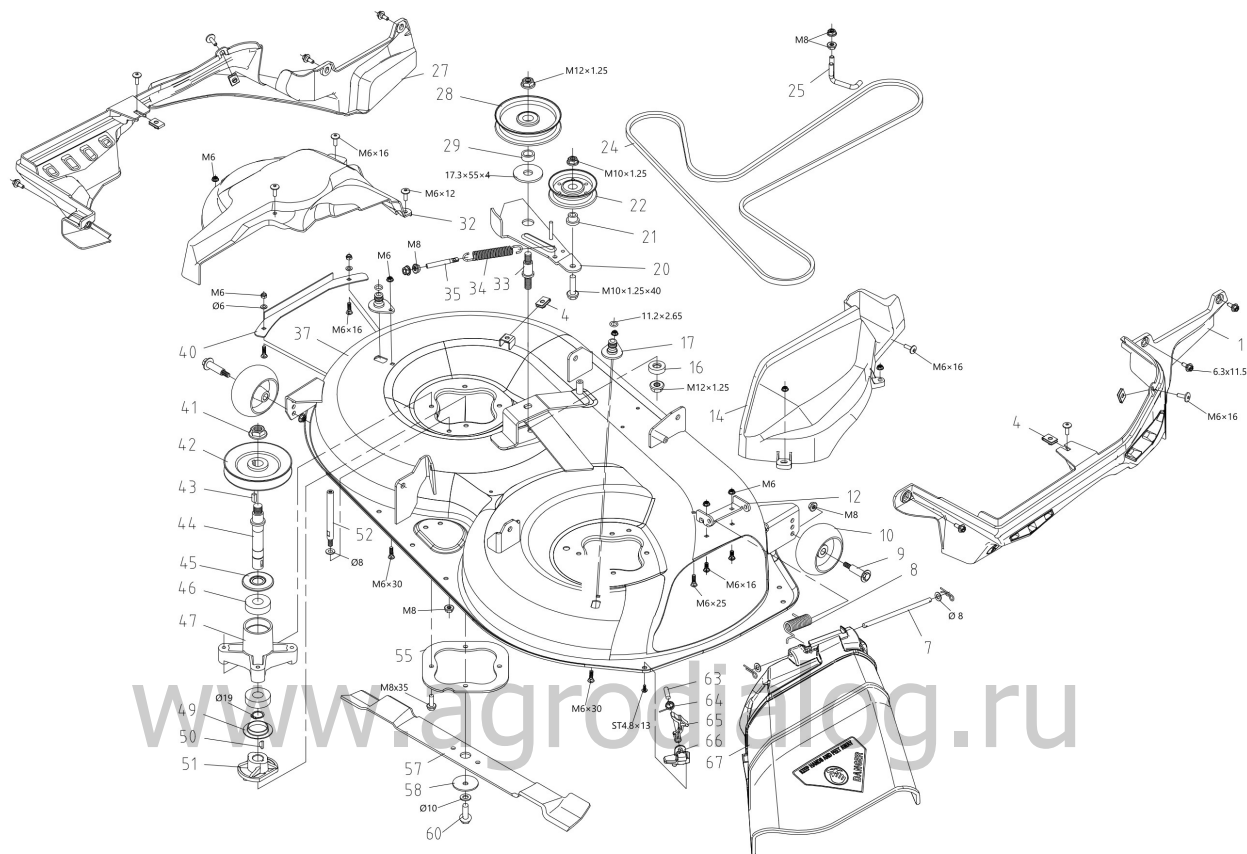

изображение Mowing deck


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000115R	Right guard				
4	5	TS000066R	Clamp				
7	1	TS000116R	Pin				
8	1	TS000117R	Spring				
9	2	TS000071R	Screw				
10	2	TS000074R	Wheel				
12	1	TS000118R	Mount				
14	1	TS000119R	Belt cover				
16	1	TS000120R	Bushing				
17	2	TS000090R	Water hose connection				
20	1	TS000121R	Lever				
21	1	TS000122R	Bushing				
22	1	TS000007R	Pulley				
24	1	TS000143R	V belt				
25	1	TS000124R	Bracket				
27	1	TS000125R	Guard sx				
28	1	TS000126R	Pulley				
29	1	TS000127R	Bushing				
32	1	TS000128R	Belt cover				
33	1	TS000129R	Spacer				
34	1	TS000130R	Spring				
35	1	TS000065R	Screw				
37	1	TS000144R	Mowing deck				
40	1	TS000145R	Bracket				
41	2	TS000132R	Nut				
42	2	TS000111R	Pulley				
43	2	TS000082R	Key				
44	2	TS000133R	Blade shaft				
45	2	TS000085R	Disc (guard)				
46	4	TS000086R	Thrust bearing				
47	2	TS000134R	Support				
49	2	TS000135R	Guard				
50	2	TS000099R	Key				
51	2	TS000095R	Blade hub			Acquistare anche il codice	
52	2	TS000136R	Pin				
55	2	TS000091R	Plate				
57	2	TS000146R	Blade				
58	2	TS000097R	Washer				
60	2	TS000098R	Screw				
63	1	TS000138R	Pin				
64	1	TS000139R	Spring				
65	1	TS000140R	Locking lever				
66	1	TS000141R	Lever support				
67	1	TS000142R	Deflector				

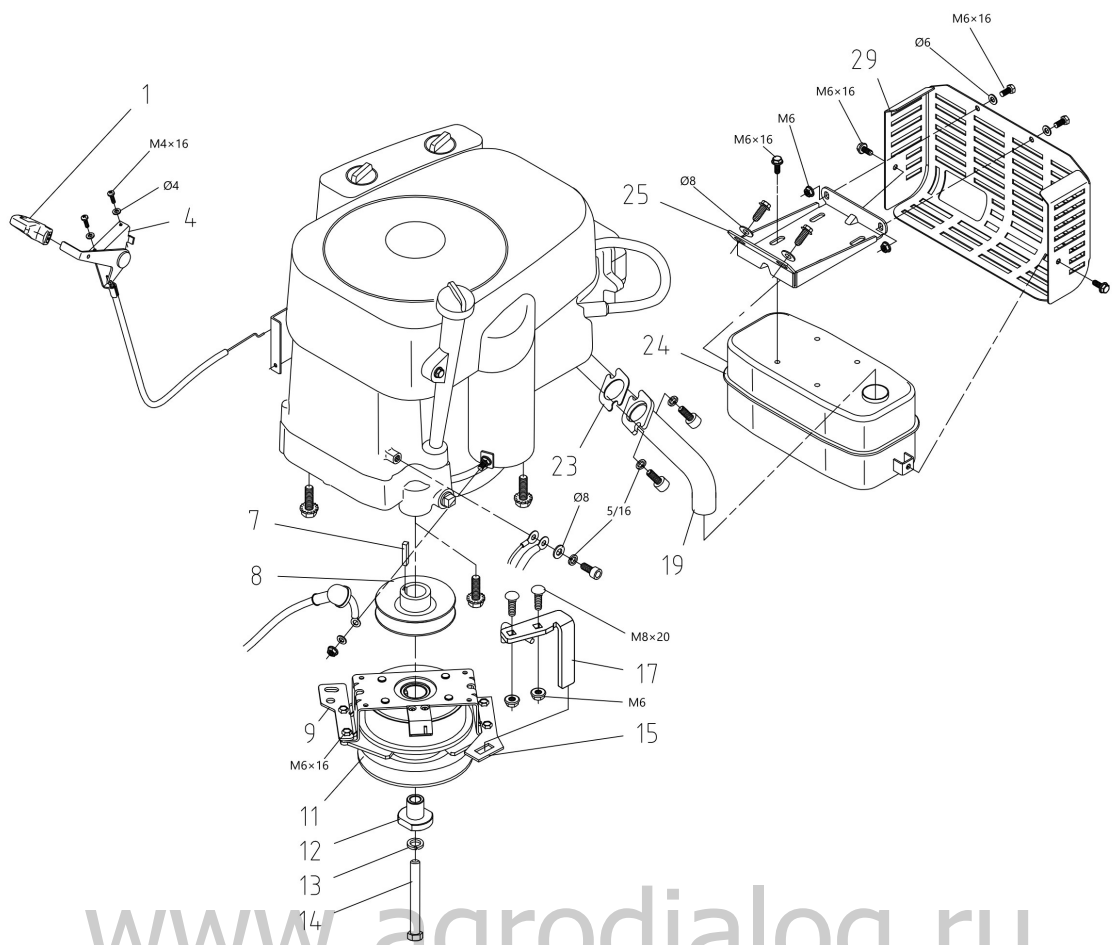

изображение Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000147R	Knob				
4	1	TS000008R	Throttle cable				
7	1	TS000009R	Key				
8	1	TS000148R	Pulley			Motore 12,5 KM - Engine	
8	1	TS000159R	Pulley			Motore 14,5 K / 16 K - Engine 14,5 K / 16 K	
9	1	TS000010R	Support				
11	1	TS000149R	Clutch				
12	1	TS000150R	Bushing				
13	1	TS000151R	Thickness				
14	1	TS000152R	Bolt				
15	1	TS000153R	Plate				
17	1	TS000154R	Bracket			Motore 12,5 KM - Engine	
17	1	TS000160R	Bracket			Motore 14,5 K / 16 K - Engine 14,5 K / 16 K	
19	1	TS000155R	Exhaust pipe				
23	1	TS000156R	Gasket				
24	1	TS000157R	Muffler				
25	1	TS000158R	Support				
29	1	TS000011R	Grid				

www.agrodialog.ru

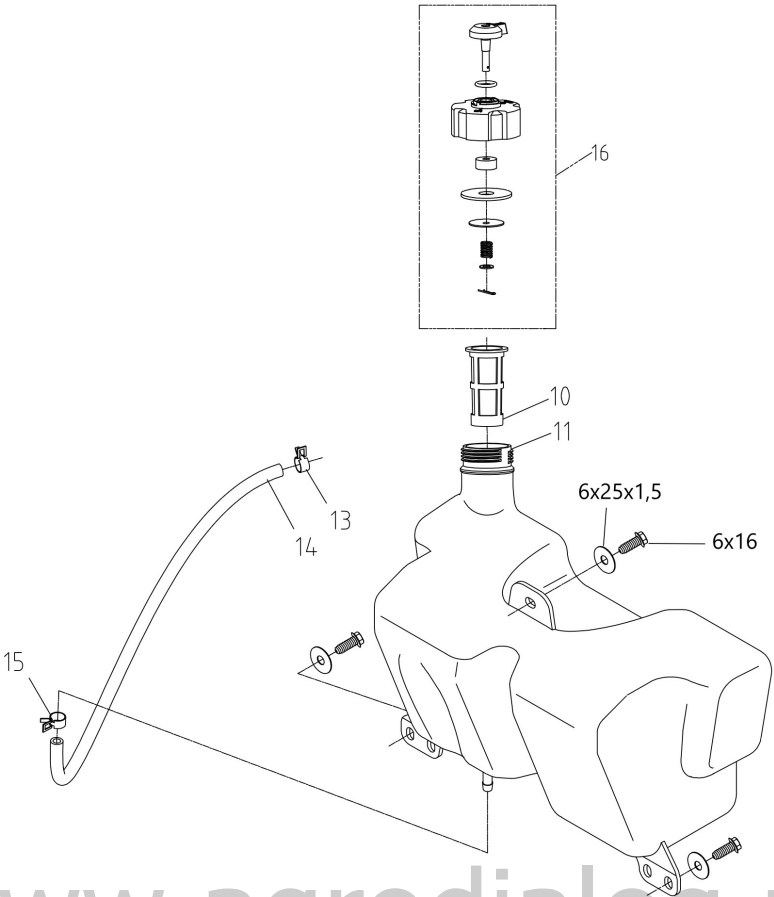


www.agrodialog.ru

изображение Tank

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
10	1	TS000012R	Filter				
11	1	TS000161R	Tank				
13	1	TS000162R	Band				
14	1	TS000163R	Fuel hose				
15	1	TS000164R	Band				
16	1	TS000013R	Tank cap				


www.agrodialog.ru

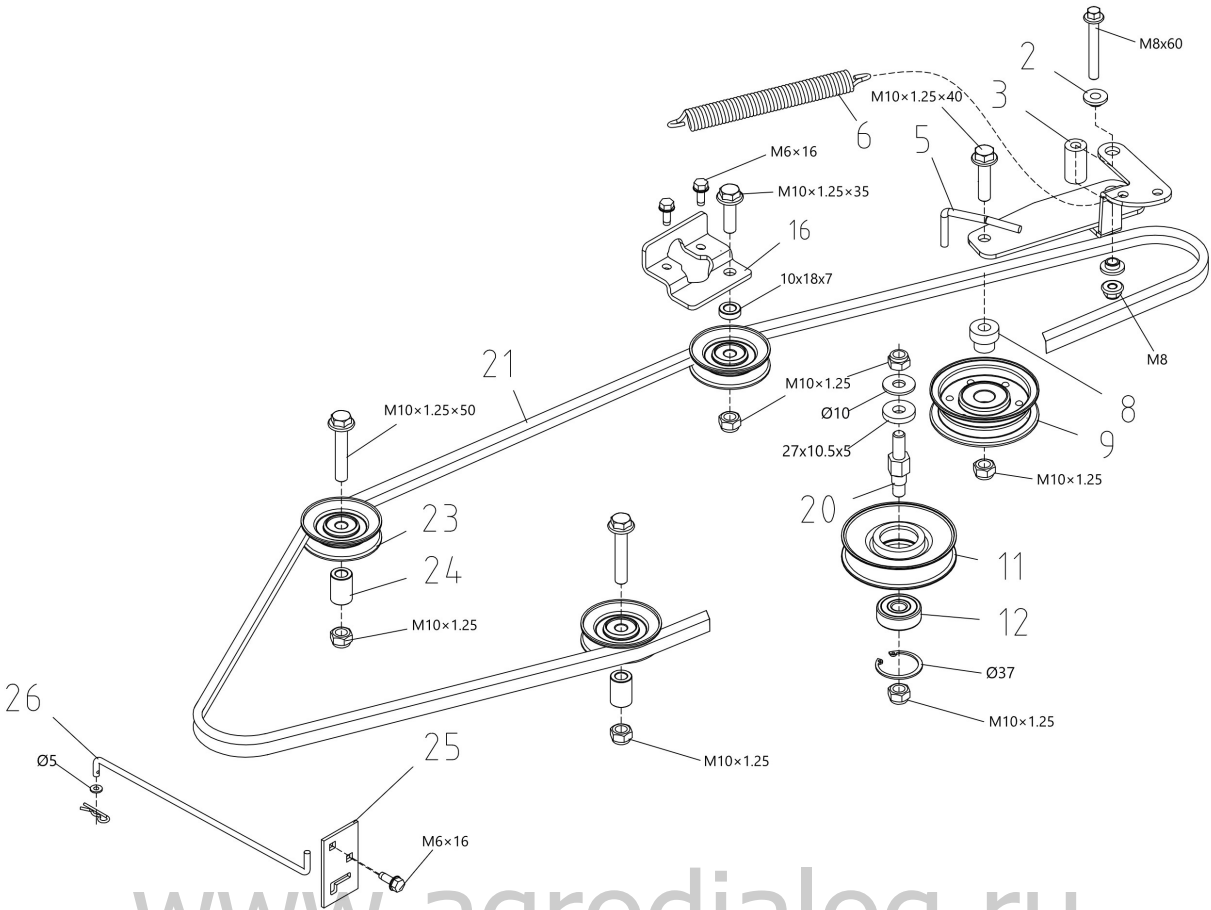

www.agrodialog.ru


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	2	TS000173R	Bushing				
3	1	TS000253R	Spacer				
5	1	TS000255R	Support				
6	1	TS000130R	Spring				
8	1	TS000122R	Bushing				
9	1	TS000007R	Pulley				
11	1	TS000006R	Pulley				
12	1	TS000005R	Thrust bearing				
16	1	TS000263R	Plate				
20	1	TS000259R	Screw				
21	1	TS000025R	Belt				
23	3	TS000023R	Pulley				
24	2	TS000260R	Bushing				
25	1	TS000265R	Support				
26	1	TS000266R	Rod				

www.agrodialog.ru

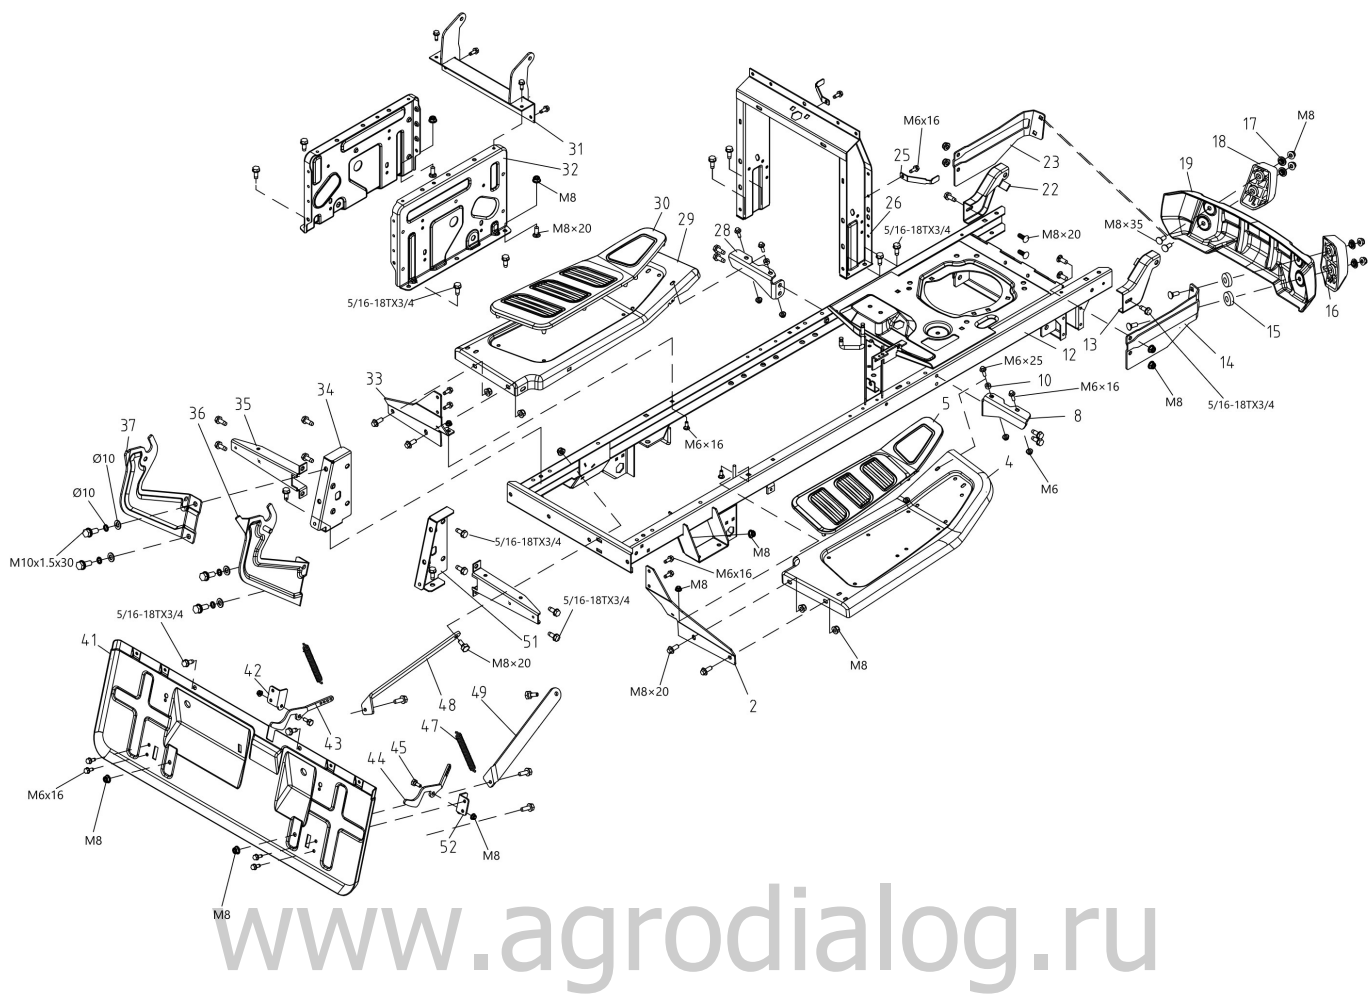

изображение Frame

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000165R	Right footboard support				
4	1	TS000166R	Footrest pad			Destra; Right	
5	1	TS000167R	Right footboard cover				
8	1	TS000168R	Right footboard support				
10	2	TS000169R	Bushing				
12	1	TS000170R	Frame				
13	1	TS000171R	Hood support			Destra; Right	
14	1	TS000172R	Support			Destra; Right	
15	4	TS000014R	Washer				
16	1	TS000015R	Bumper				
17	4	TS000173R	Bushing				
18	1	TS000016R	Bumper				
19	1	TS000017R	Lower hood				
22	1	TS000174R	Hood support			Sinistra; Left	
23	1	TS000175R	Support			Sinistra; Left	
25	2	TS000176R	Plate				
26	1	TS000177R	Column support				
28	1	TS000178R	Left footboard support				
29	1	TS000179R	Footrest pad			Sinistra; Left	
30	1	TS000180R	Left footboard cover				
31	1	TS000181R	Frame				
32	2	TS000182R	Support				
33	1	TS000183R	Left footboard support				
34	1	TS000184R	Support			Sinistra; Left	
35	2	TS000185R	Support				
36	1	TS000186R	Support			Destra; Right	
37	1	TS000187R	Support			Sinistra; Left	
41	1	TS000188R	Support				
42	1	TS000189R	Bracket				
43	1	TS000190R	Hook			Sinistra; Left	
44	1	TS000191R	Hook			Destra; Right	
45	2	TS000192R	Screw				
47	2	TS000193R	Spring				
48	1	TS000194R	Left bracket				
49	1	TS000195R	Right bracket				
51	1	TS000196R	Support			Destra; Right	
52	1	TS000197R	Bracket				

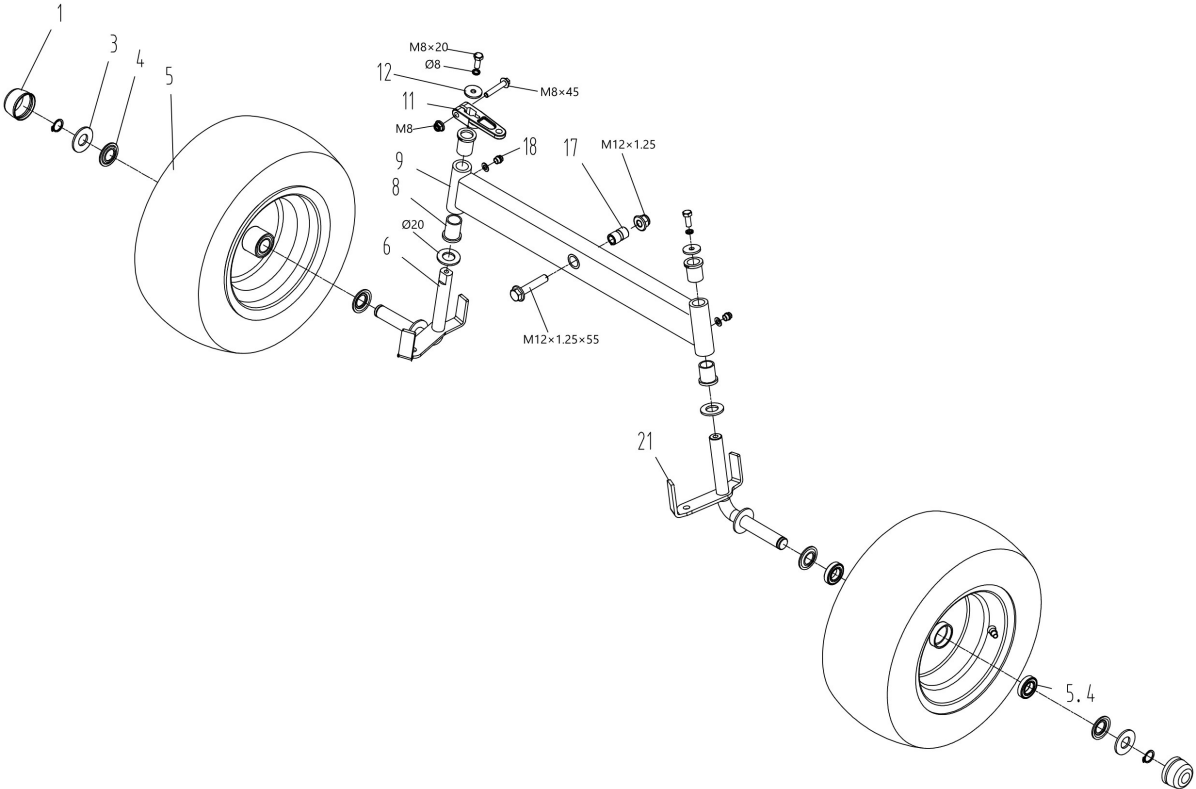


www.agrodialog.ru

изображение Front axle

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	TS000198R	Hub cap				
3	2	TS000199R	Washer				
4	4	TS000200R	Spacer				
5	2	TS000018R	Compl. front wheel				
5,4	4	TS000204R	Thrust bearing				
6	1	TS000019R	Pin			Destro; Right	
8	4	TS000020R	Bushing				
9	1	TS000205R	Front axle				
11	1	TS000021R	Lever				
12	2	TS000083R	Washer				
17	1	TS000206R	Spacer				
18	2	TS000068R	Nipple				
21	1	TS000022R	Pin			Sinistro; Left	


www.agrodialog.ru

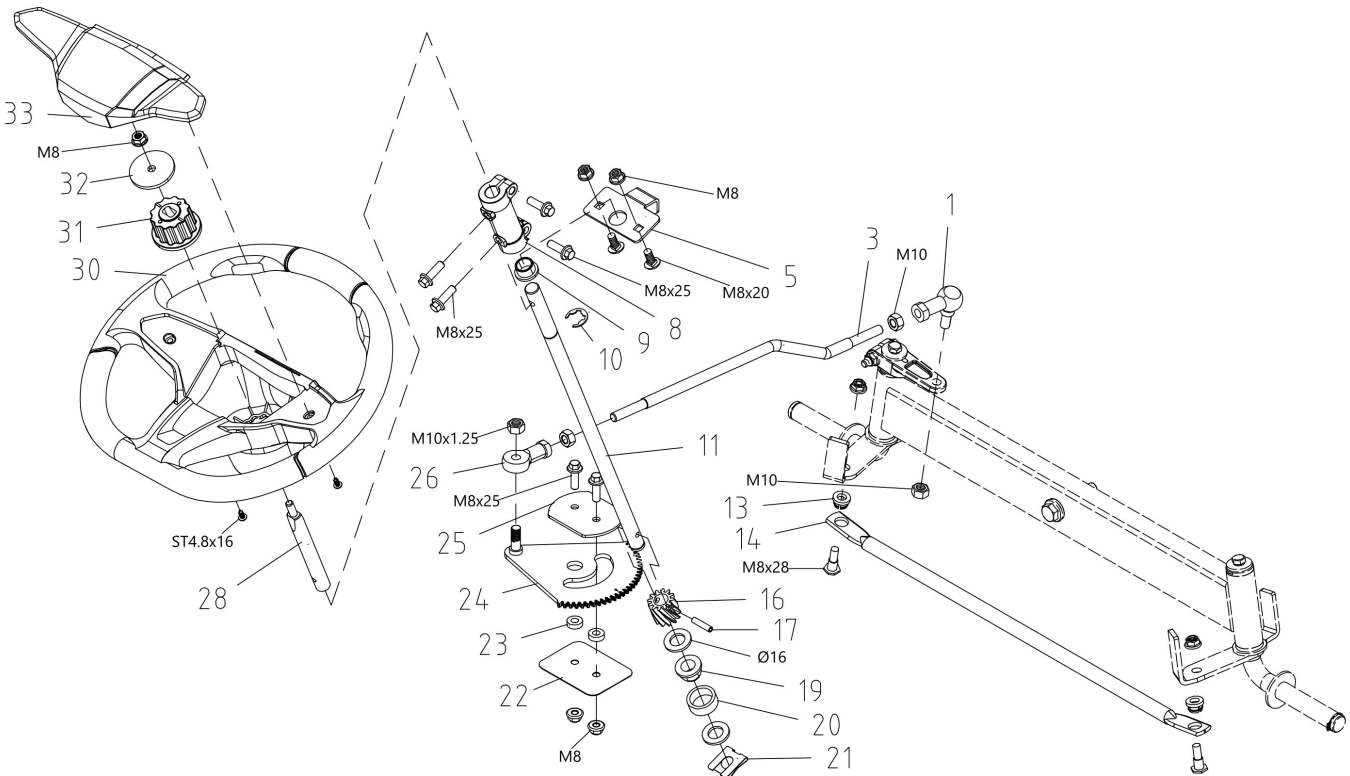

www.agrodialog.ru

изображение Steering arm


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000267R	Joint				
3	1	TS000268R	Tie rod				
5	1	TS000269R	Plate				
8	1	TS000270R	Sleeve				
9	1	TS000271R	Bushing				
10	1	TS000272R	Snap ring				
11	1	TS000273R	Steering arm				
13	2	TS000274R	Bushing				
14	1	TS000275R	Tie rod				
16	1	TS000026R	Sprocket				
17	1	TS000276R	Pin				
19	1	TS000378R	Bushing				
20	1	TS000277R	Bushing				
21	1	TS000278R	Cotter pin				
22	1	TS000279R	Fixing plate				
23	2	TS000280R	Bushing				
24	1	TS000027R	Sector				
25	1	TS000281R	Fixing plate				
26	1	TS000282R	Joint				
28	1	TS000283R	Spacer				
30	1	TS000284R	Steering wheel				
31	1	TS000028R	Support				
32	1	TS000379R	Washer				
33	1	TS000375R	Cover			Rosso - Red	

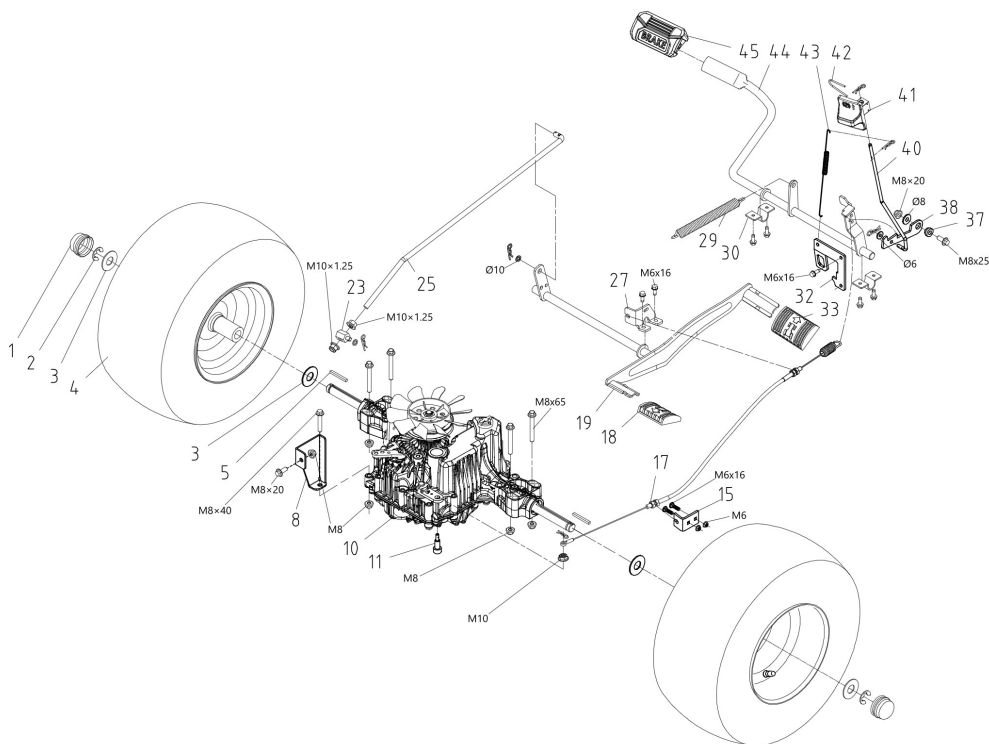

www.agrodialog.ru

изображение Rear axle


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	TS000198R	Hub cap				
2	2	TS000207R	Snap ring				
3	4	TS000199R	Washer				
4	2	TS000212R	Compl. rear wheel				
5	2	TS000210R	Key				
8	1	TS000240R	Plate				
10	1	TS000241R	Transmission				
11	1	TS000242R	Pin				
15	1	TS000243R	Support				
17	1	TS000244R	Break cable				
18	1	TS000245R	Clamp cover rear				
19	1	TS000246R	Pedal				
23	1	TS000247R	Pin				
25	1	TS000248R	Tie rod				
27	1	TS000249R	Fixing plate				
29	1	TS000250R	Spring				
30	2	TS000231R	Support				
32	1	TS000230R	Support				
33	1	TS000251R	Clamp cover front				
37	1	TS000232R	Bushing				
38	1	TS000233R	Compl.brake lever				
40	1	TS000234R	Control rod				
41	1	TS000235R	Handle				
42	1	TS000236R	Fork				
43	1	TS000237R	Spring				
44	1	TS000238R	Brake pedal				
45	1	TS000239R	Cover moulding				

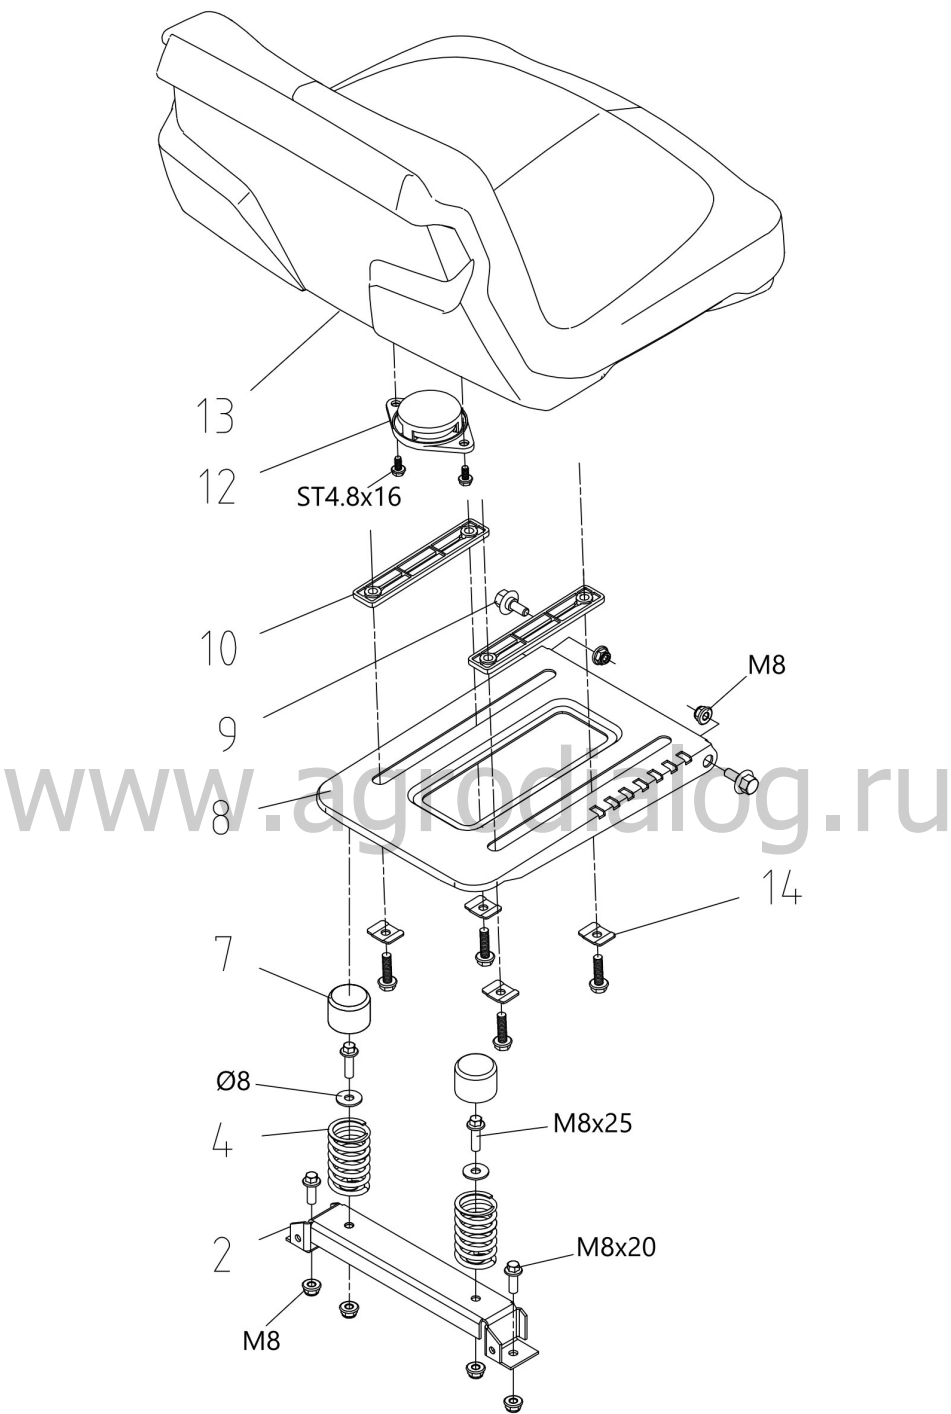

изображение Seat

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000285R	Bar				
4	2	TS000286R	Spring				
7	2	TS000287R	Cover				
8	1	TS000288R	Seat support				
9	2	TS000289R	Screw				
10	2	TS000290R	Slide				
12	1	TS000029R	Seat switch				
13	1	TS000372R	Seat			Rosso - Red	
14	4	TS000291R	Spacer				

www.agrodialog.ru

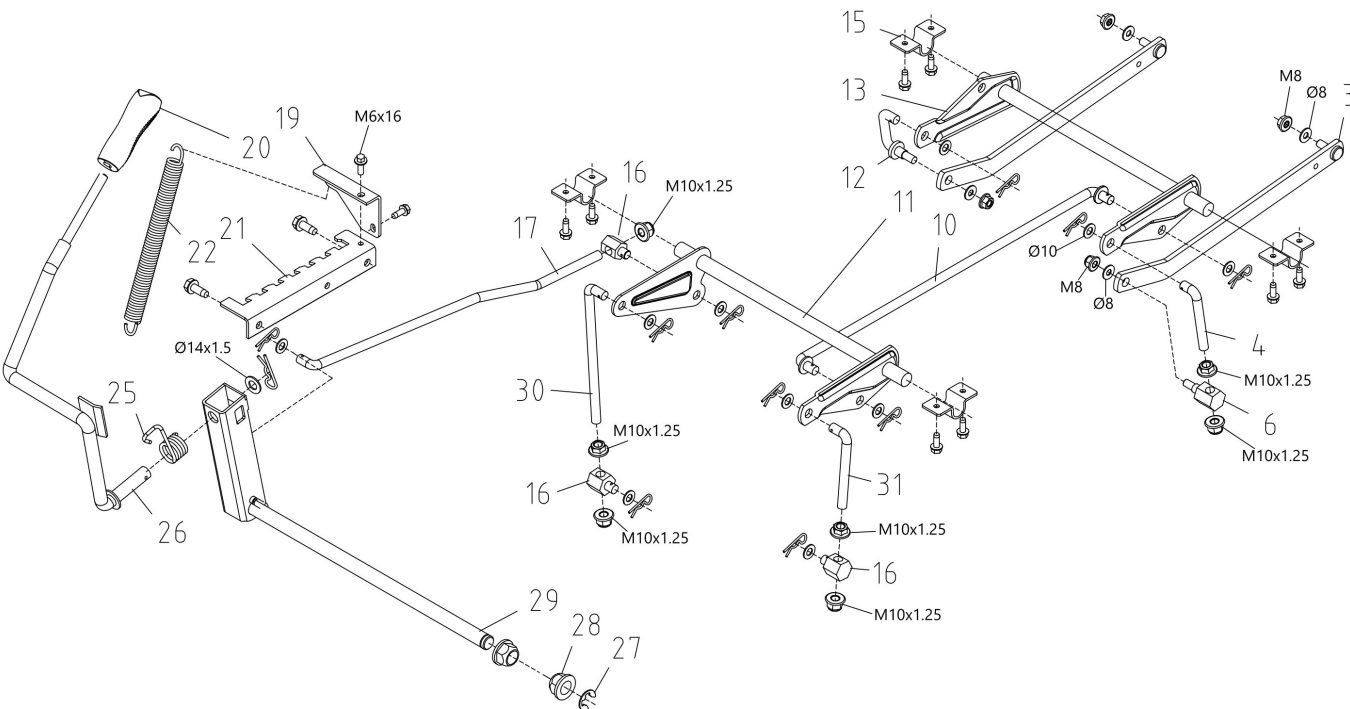


www.agrodialog.ru

изображение Cutting plate lifting


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
3	2	TS000313R	Rod				
4	1	TS000293R	Tie rod				
6	1	TS000294R	Joint				
10	1	TS000308R	Rod				
11	1	TS000309R	Axel lift				
12	1	TS000297R	Rod				
13	1	TS000298R	Support				
15	4	TS000231R	Support				
16	3	TS000299R	Joint				
17	1	TS000310R	Lever				
19	1	TS000301R	Plate				
20	1	TS000226R	Knob				
21	1	TS000030R	Support				
22	1	TS000302R	Spring				
25	1	TS000303R	Spring				
26	1	TS000031R	Lever				
27	1	TS000223R	Snap ring				
28	2	TS000378R	Bushing				
29	1	TS000304R	Lever				
30	1	TS000311R	Tie rod				
31	1	TS000312R	Tie rod				

www.agrodialog.ru

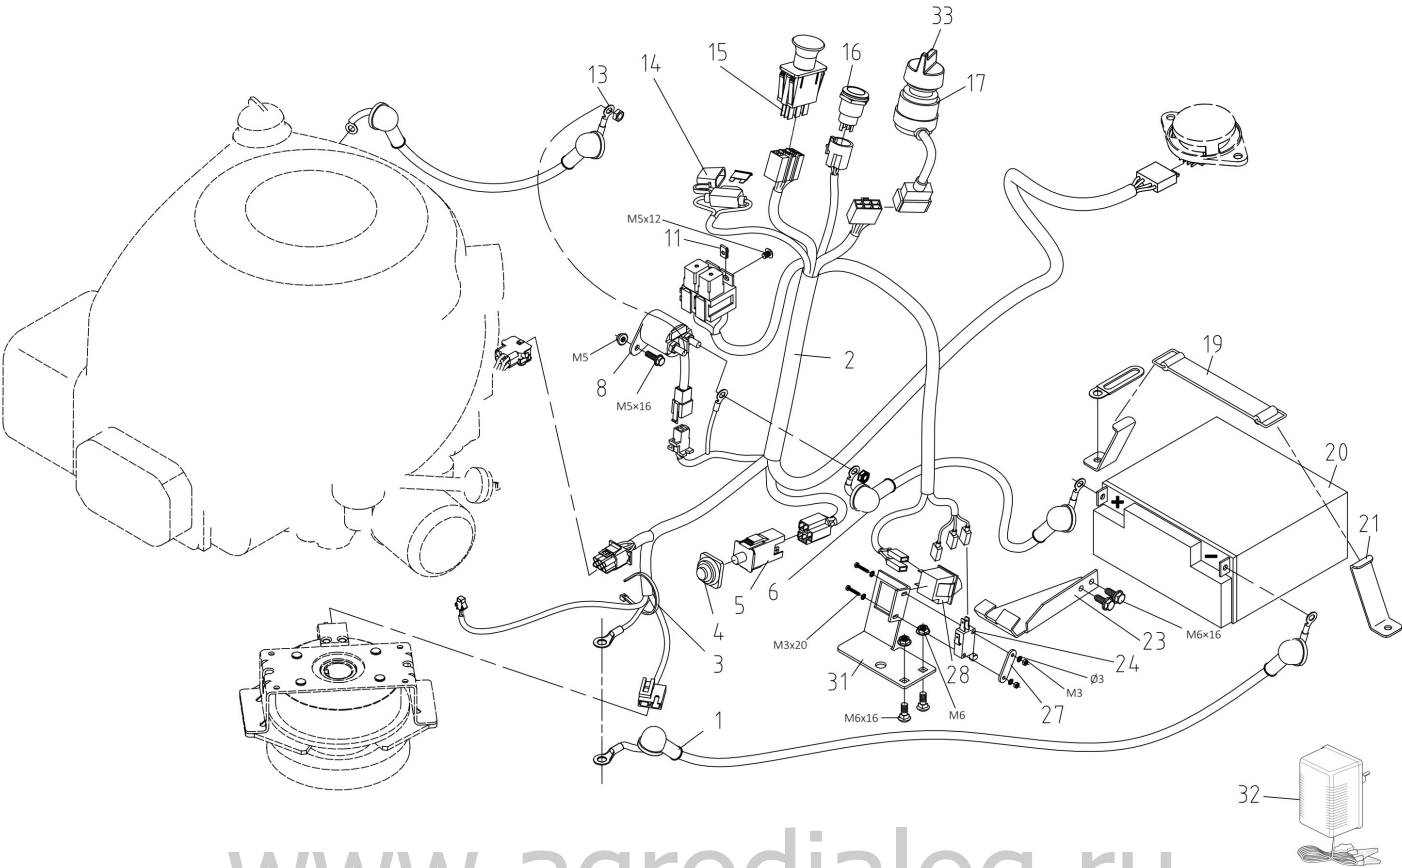


www.agrodialog.ru

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000314R	Battery cables				
2	1	TS000339R	Wiring				
3	20	TS000316R	Band				
3	5	TS000317R	Band				
4	1	TS000318R	Switch protection				
5	1	TS000032R	Switch				
6	1	TS000319R	Battery cables				
8	1	TS000033R	Solenoid				
11	1	TS000323R	Clamp				
13	1	TS000324R	Wire				
14	1	TS000325R	Fuse				
15	1	TS000034R	Switch				
16	1	TS000326R	Switch				
17	1	TS000035R	Shoe				
19	1	TS000332R	Belt				
20	1	TS000038R	Battery				
21	2	TS000333R	Bracket				
23	1	TS000336R	Control lever				
24	1	TS000331R	Switch				
27	1	TS000337R	Bracket				
28	2	TS000037R	Micro-switch				
31	1	TS000338R	Support				
32	1	68130481	Battery charger				
33	1	TS000412R	Starting key				

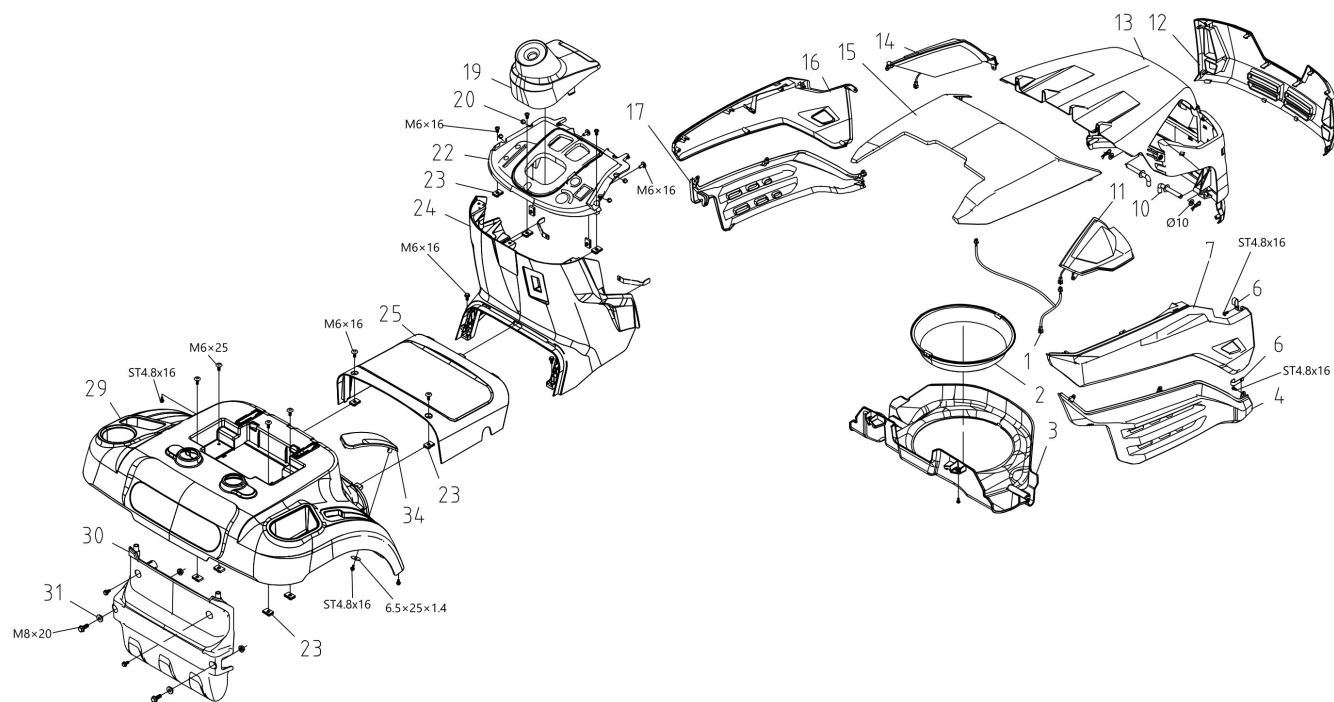

www.agrodialog.ru


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000340R	Wiring				
2	1	TS000341R	Adapter				
3	1	TS000342R	Deflector				
4	1	TS000343R	Right guard				
6	5	TS000344R	Fairled				
7	1	TS000360R	Right guard			Rosso - Red	
10	2	TS000345R	Pin				
11	1	TS000346R	Headlamp				
12	1	TS000363R	Guard			Rosso - Red	
13	1	TS000039R	Upper hood				
14	1	TS000347R	Headlamp				
15	1	TS000366R	Engine cover			Rosso - Red	
16	1	TS000369R	Left guard			Rosso - Red	
17	1	TS000348R	Left guard				
19	1	TS000349R	Cover				
20	4	TS000350R	Shock absorber				
22	1	TS000351R	Dashboard				
23	9	TS000066R	Clamp				
24	1	TS000352R	Panel				
25	1	TS000040R	Cover				
29	1	TS000042R	Cover				
30	1	TS000356R	Guard				
31	2	TS000173R	Bushing				
34	1	TS000357R	Lock				

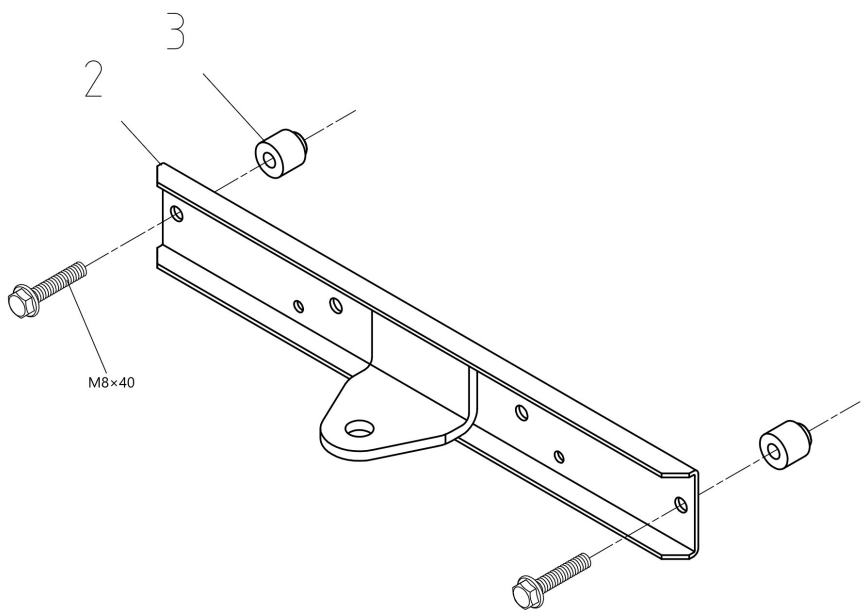

www.agrodialog.ru

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000358R	Towing hitch				
3	2	TS000359R	Spacer				

www.agrodialog.ru

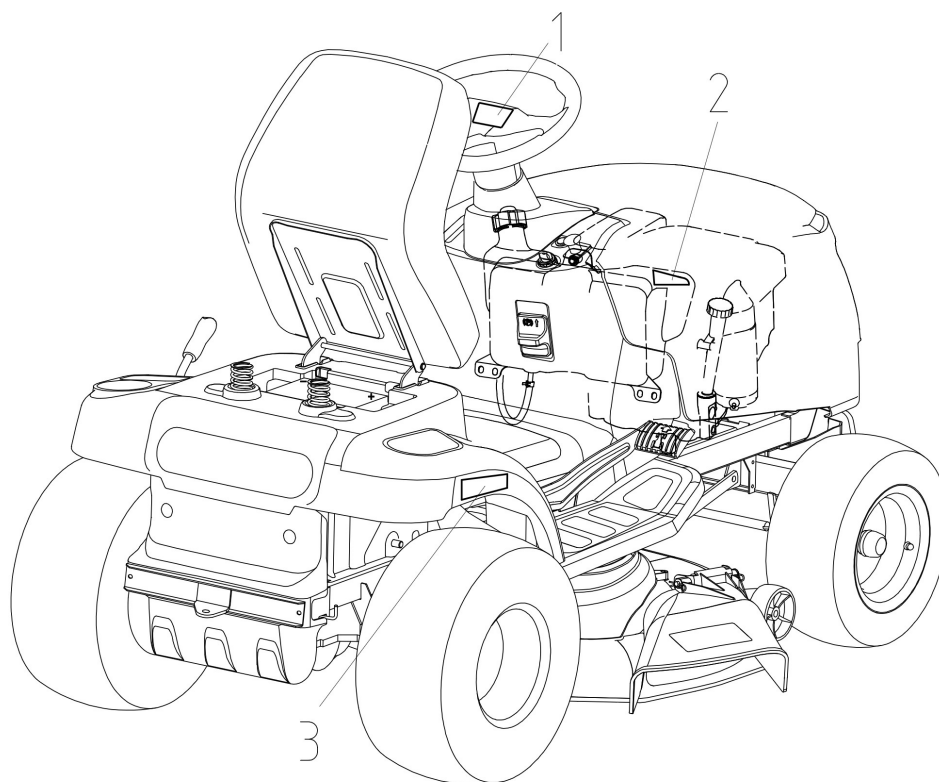

www.agrodialog.ru

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000405R	Label				
2	1	TS000396R	Label				
3	1	TS000389R	Label			109L/16K	

www.agrodialog.ru