

EF 86R/12,5 K M Cat. 2024 Garden tractor



Документы

Mulching Kit

Grassbag

Mowing deck

Engine

Tank

Transmission

Frame

Front axle

Steering arm

Rear axle

Seat

Cutting plate lifting

Electrical parts

body

Towing hitch

Labels

Top cover

Ignition system

Flywheel

Starter lever

Control lever

Carburetor

Air filter

 
Valves

Crankshaft and piston

Crankcase cover

Cylinder and crankcase

www.agrodialog.ru

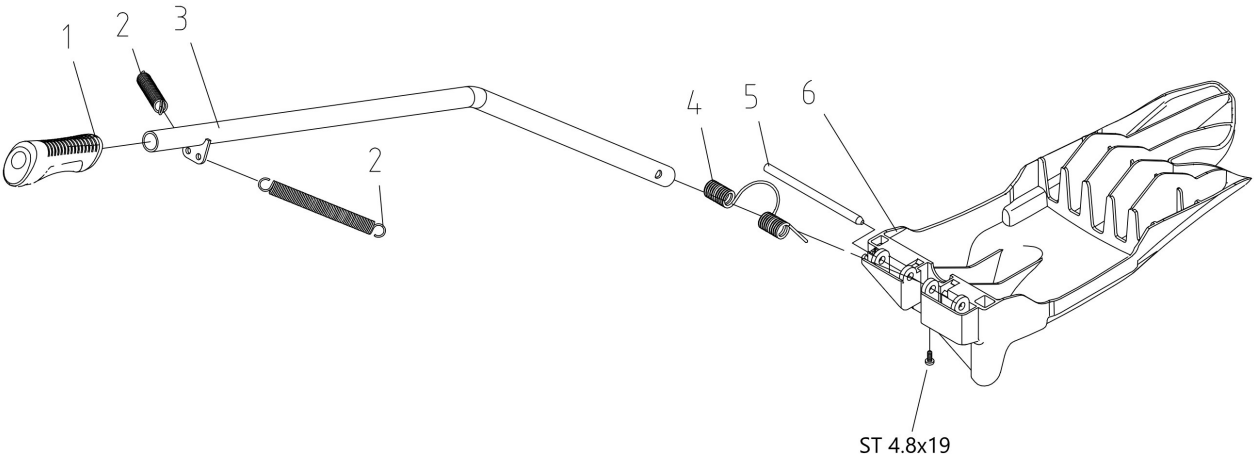


www.agrodialog.ru

изображение Mulching Kit

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000047R	Knob				
2	2	TS000048R	Spring				
3	1	TS000049R	Handle				
4	1	TS000050R	Spring				
5	1	TS000051R	Pin				
6	1	TS000001R	Deflector				

 
www.agrodialog.ru

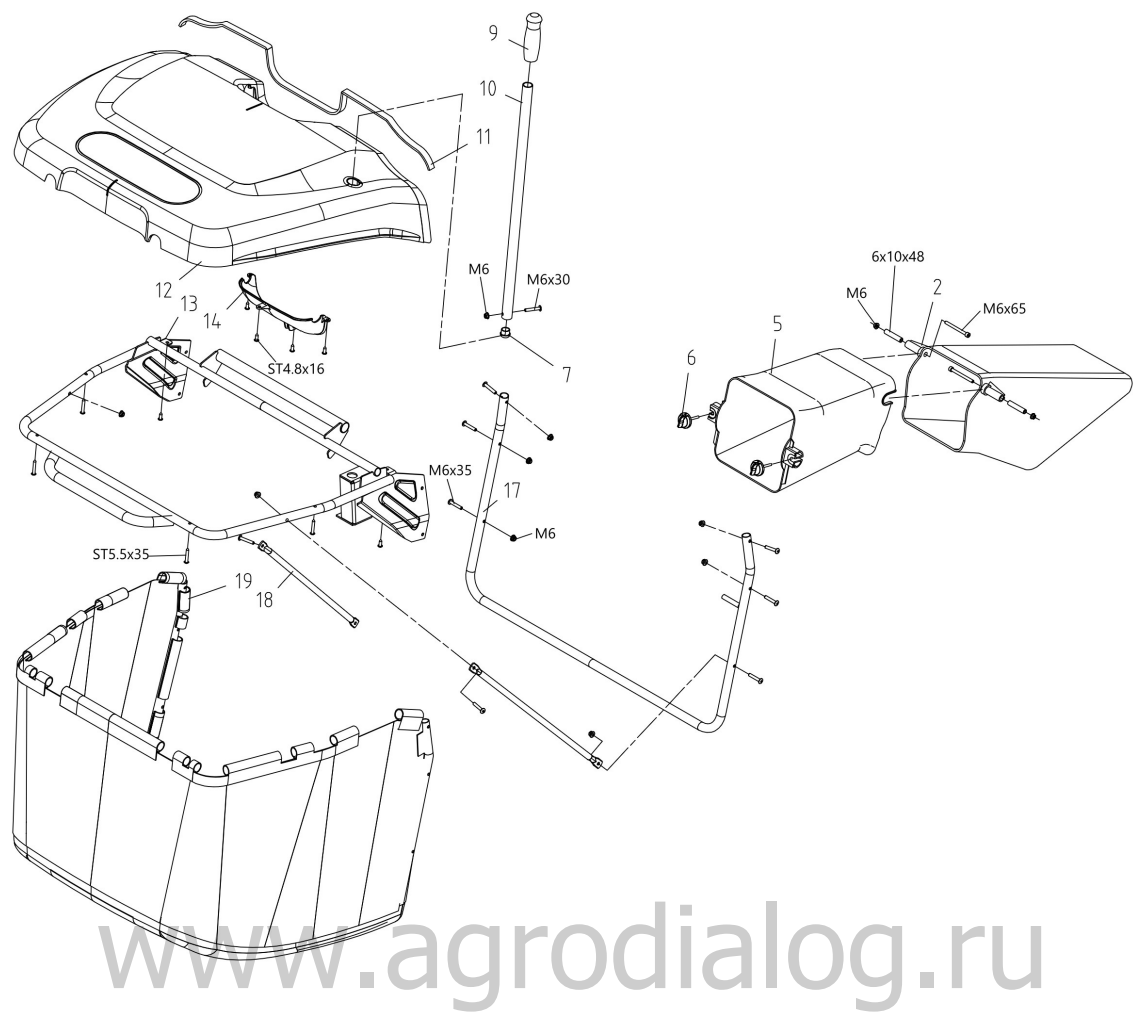

изображение Grassbag


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000052R	Exhaust				
5	1	TS000053R	Exhaust pipe				
6	2	TS000054R	Screw				
7	1	TS000055R	Cap				
9	1	TS000056R	Knob				
10	1	TS000057R	Lever				
11	1	TS000058R	Gasket				
12	1	TS000004R	Grass-bag cover				
13	1	TS000059R	Frame				
14	1	TS000060R	Cover				
17	1	TS000061R	Frame				
18	2	TS000062R	Bracket				
19	1	TS000381R	Grass collector			Efco	

 www.agrodialog.ru

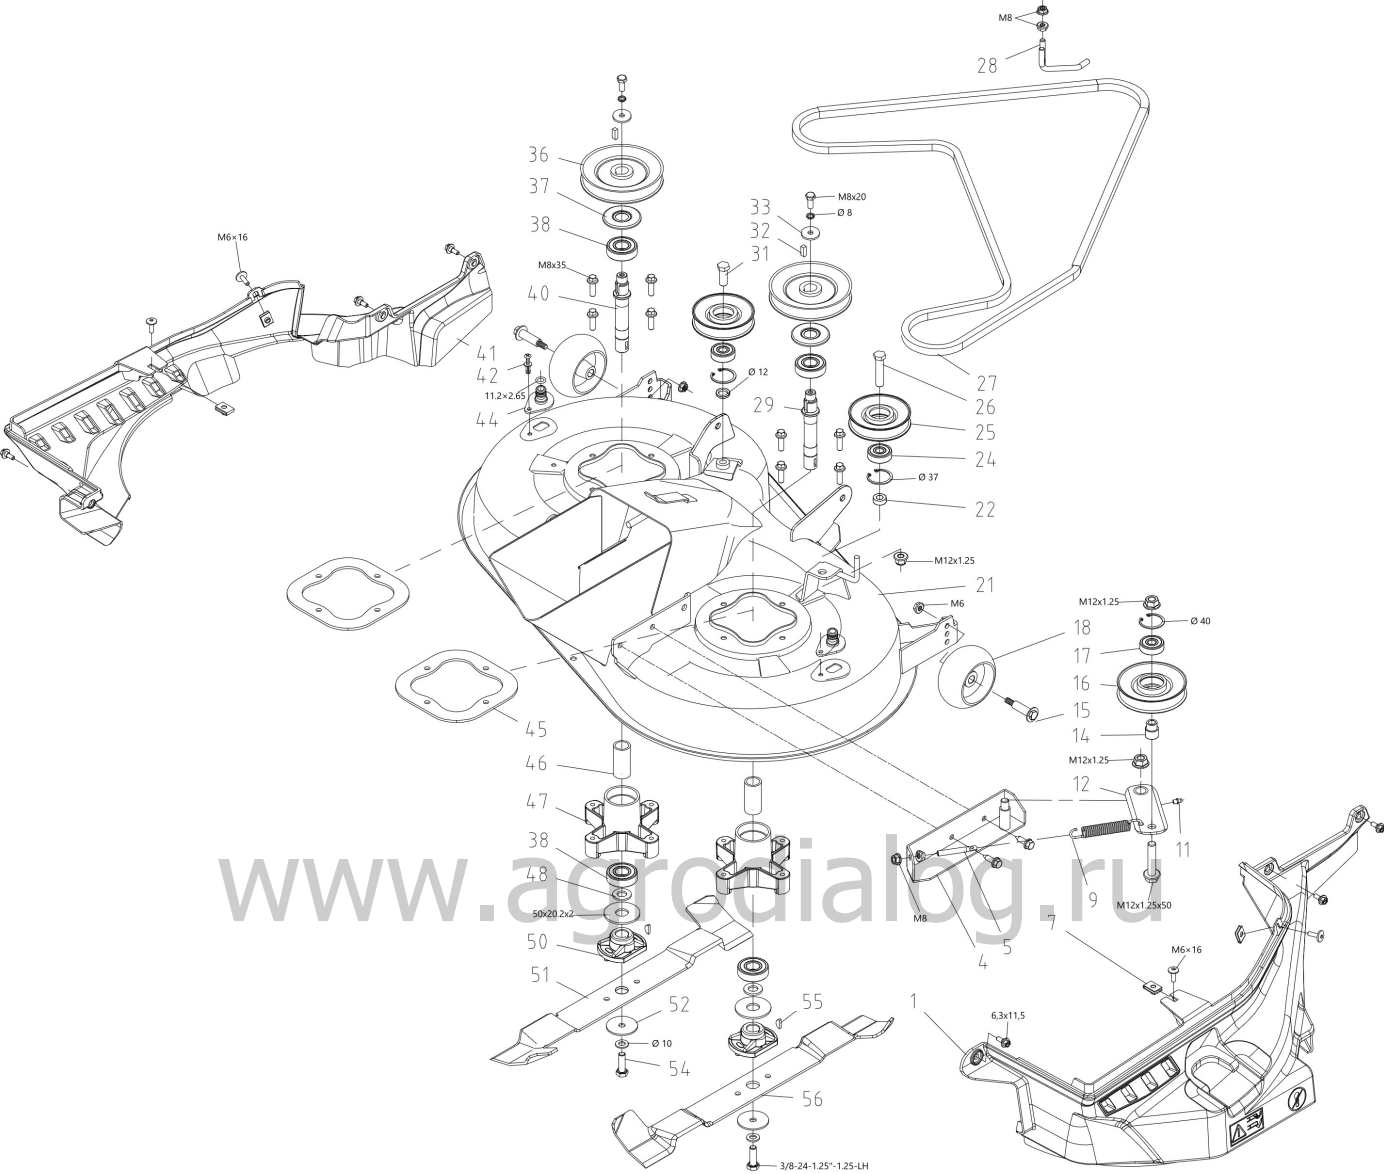

изображение Mowing deck

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000063R	Belt cover				
4	1	TS000064R	Bracket				
5	1	TS000065R	Screw				
7	4	TS000066R	Clamp				
9	1	TS000067R	Spring				
11	1	TS000068R	Nipple				
12	1	TS000069R	Lever				
14	1	TS000070R	Bushing				
15	2	TS000071R	Screw				
16	1	TS000072R	Pulley				
17	1	TS000073R	Thrust bearing				
18	2	TS000074R	Wheel				
21	1	TS000075R	Mowing deck				
22	1	TS000076R	Bushing				
24	2	TS000005R	Thrust bearing				
25	2	TS000006R	Pulley				
26	1	TS000077R	Screw				
27	1	TS000078R	Belt				
28	1	TS000079R	Bracket				
29	1	TS000080R	Blade shaft				
31	1	TS000081R	Screw				
32	2	TS000082R	Key				
33	2	TS000083R	Washer				
36	2	TS000084R	Pulley				
37	2	TS000085R	Disc (guard)				
38	4	TS000086R	Thrust bearing				
40	1	TS000087R	Blade shaft				
41	1	TS000088R	Belt cover				
42	2	TS000089R	Rivet				
44	2	TS000090R	Water hose connection				
45	2	TS000091R	Plate				
46	2	TS000092R	Tube				
47	2	TS000093R	Support				
48	2	TS000094R	Spacer				
50	2	TS000095R	Blade hub				
51	1	TS000096R	Blade left				
52	2	TS000097R	Washer				
54	1	TS000098R	Screw				
55	2	TS000099R	Key				
56	1	TS000100R	Blade right				

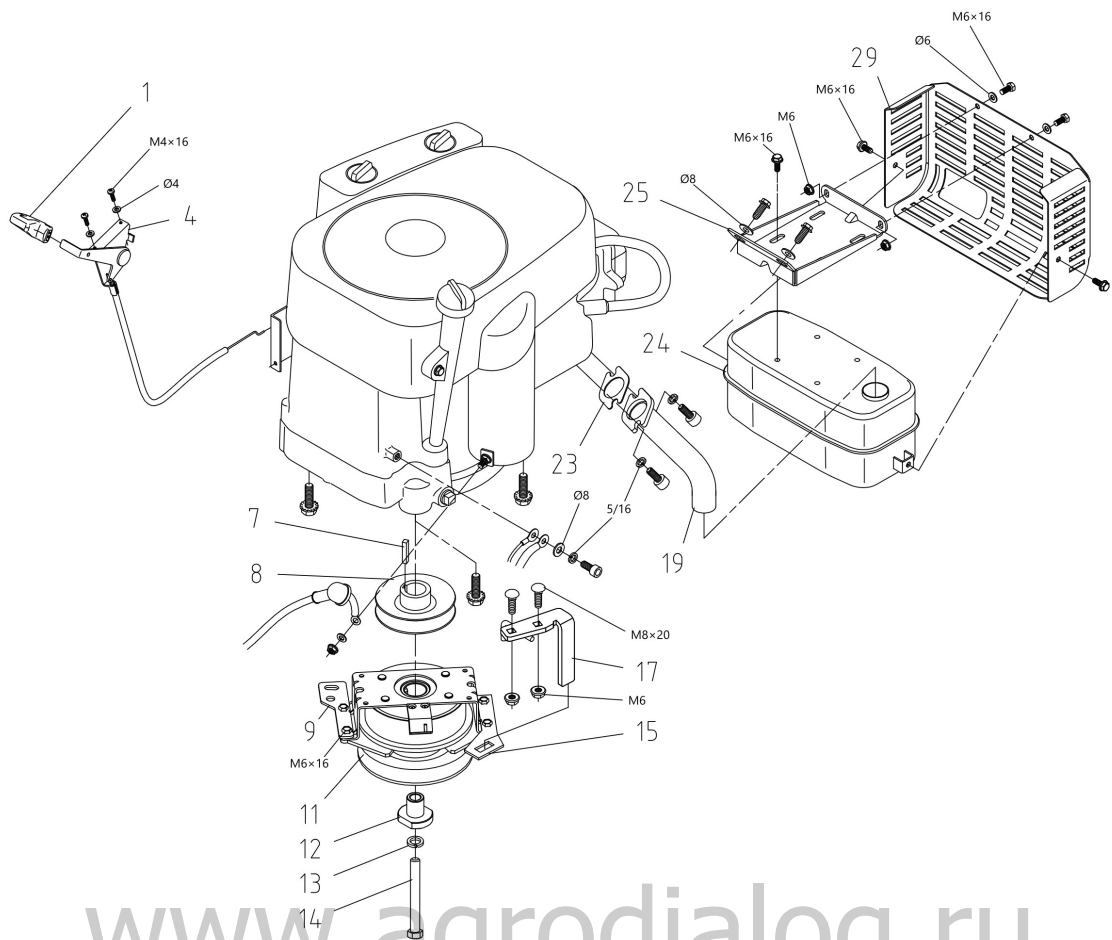 


www.agrodialog.ru

изображение Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000147R	Knob				
4	1	TS000008R	Throttle cable				
7	1	TS000009R	Key				
8	1	TS000148R	Pulley			Motore 12,5 KM - Engine	
8	1	TS000159R	Pulley			Motore 14,5 K / 16 K - Engine 14,5 K / 16 K	
9	1	TS000010R	Support				
11	1	TS000149R	Clutch				
12	1	TS000150R	Bushing				
13	1	TS000151R	Thickness				
14	1	TS000152R	Bolt				
15	1	TS000153R	Plate				
17	1	TS000154R	Bracket			Motore 12,5 KM - Engine	
17	1	TS000160R	Bracket			Motore 14,5 K / 16 K - Engine 14,5 K / 16 K	
19	1	TS000155R	Exhaust pipe				
23	1	TS000156R	Gasket				
24	1	TS000157R	Muffler				
25	1	TS000158R	Support				
29	1	TS000011R	Grid				

 www.agrodialog.ru

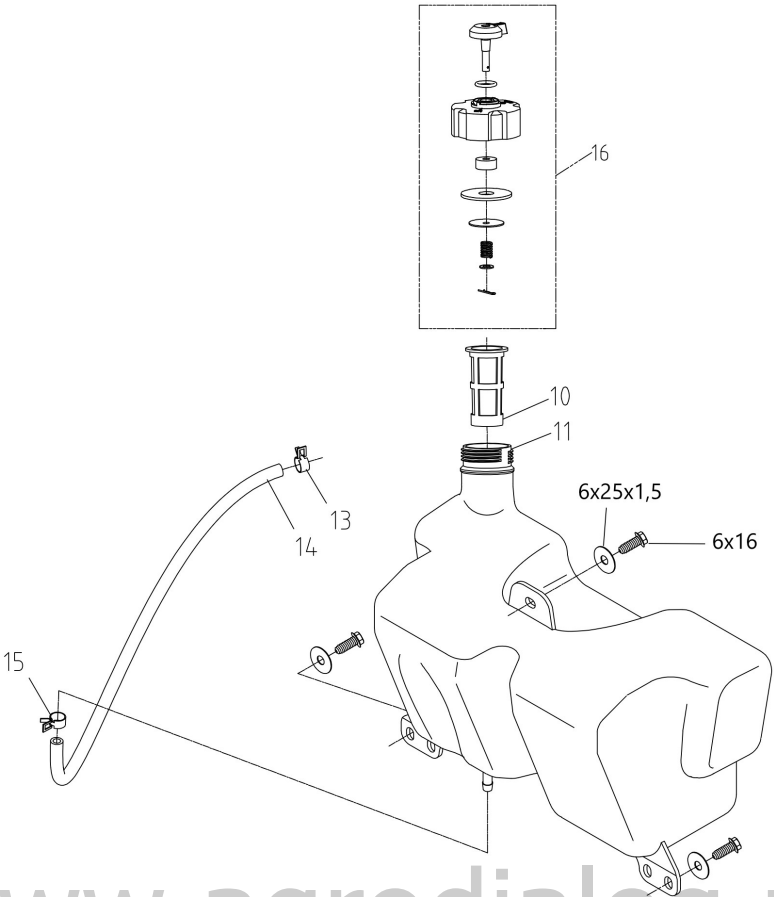


www.agrodialog.ru

изображение Tank

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
10	1	TS000012R	Filter				
11	1	TS000161R	Tank				
13	1	TS000162R	Band				
14	1	TS000163R	Fuel hose				
15	1	TS000164R	Band				
16	1	TS000013R	Tank cap				

 
www.agrodialog.ru

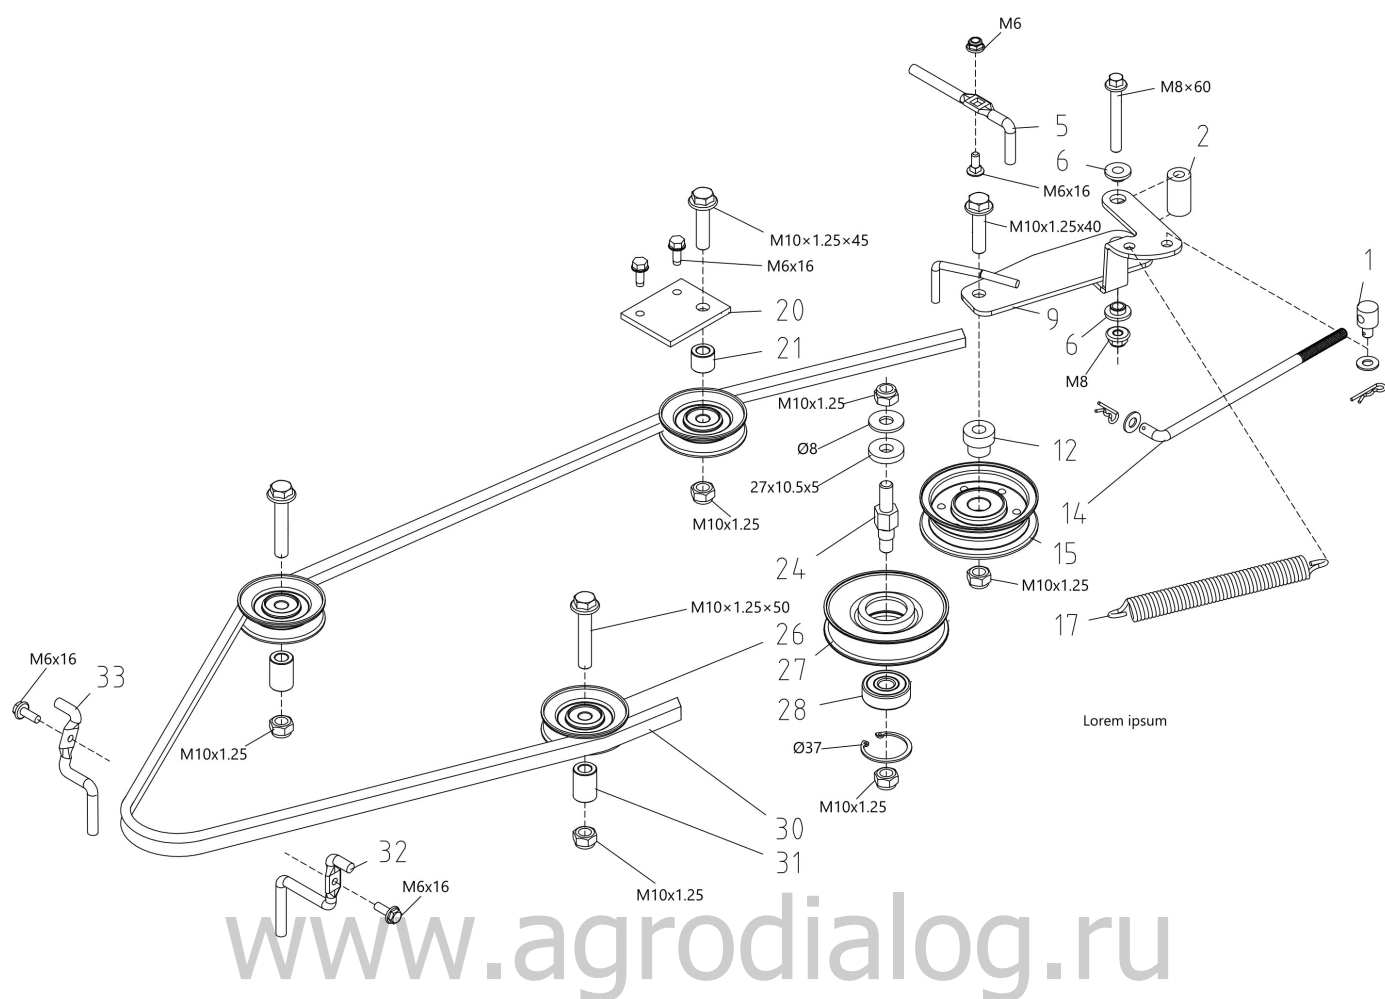

изображение Transmission


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000252R	Pin				
2	1	TS000253R	Spacer				
5	1	TS000254R	Guide pulley				
6	2	TS000173R	Bushing				
9	1	TS000255R	Support				
12	1	TS000122R	Bushing				
14	1	TS000256R	Rod				
15	1	TS000007R	Pulley				
17	1	TS000130R	Spring				
20	1	TS000257R	Slide				
21	1	TS000258R	Spacer				
24	1	TS000259R	Screw				
26	3	TS000023R	Pulley				
27	1	TS000006R	Pulley				
28	1	TS000005R	Thrust bearing				
30	1	TS000024R	Belt				
31	2	TS000260R	Bushing				
32	1	TS000261R	Guide belt				
33	1	TS000262R	Guide belt				

 www.agrodialog.ru

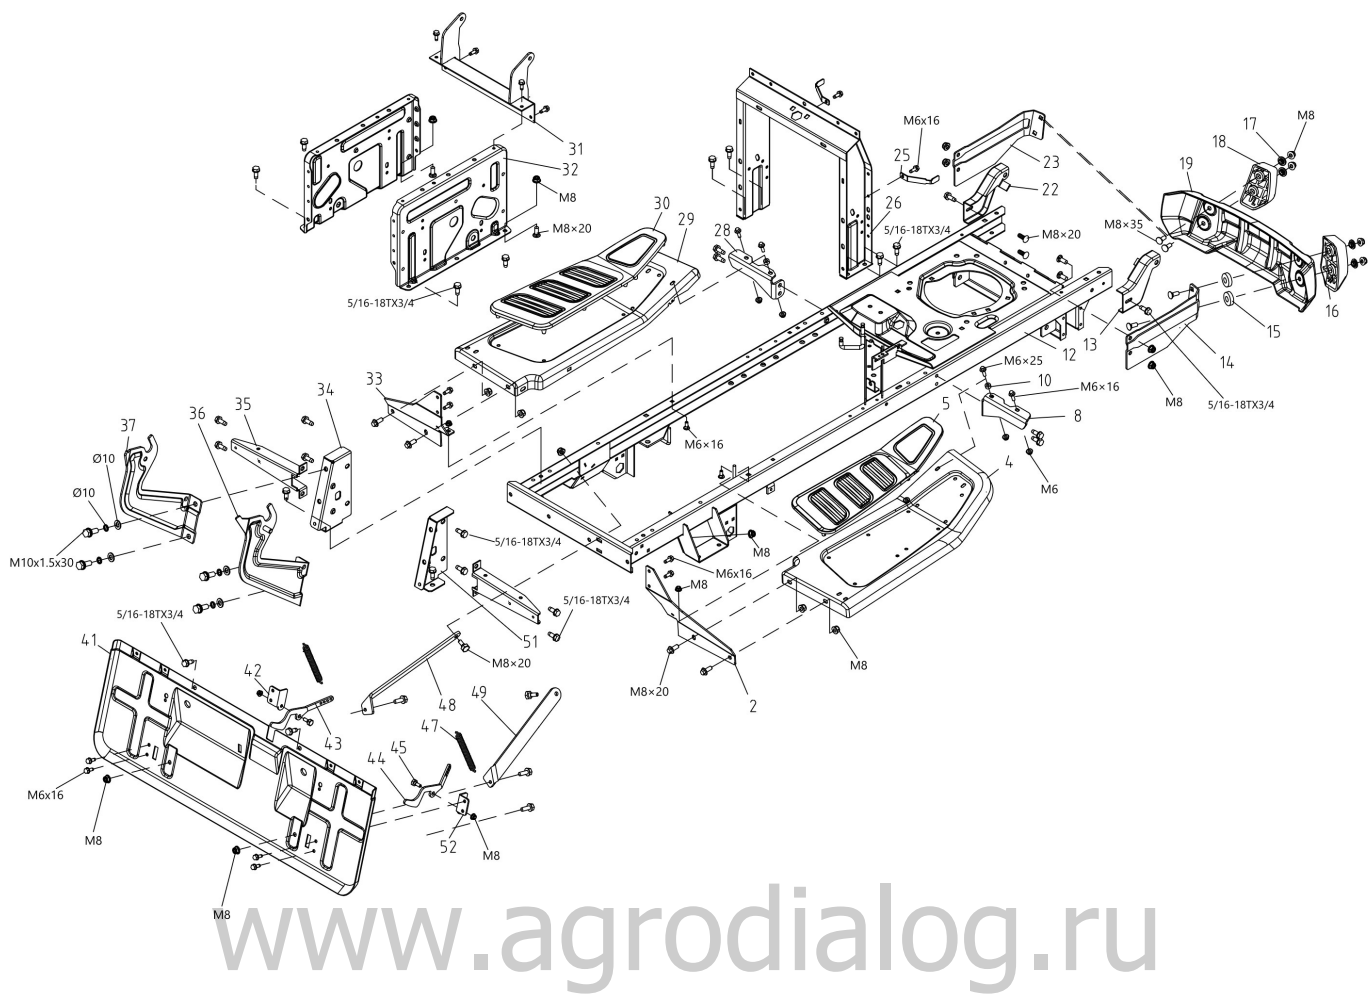

изображение Frame

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000165R	Right footboard support				
4	1	TS000166R	Footrest pad			Destra; Right	
5	1	TS000167R	Right footboard cover				
8	1	TS000168R	Right footboard support				
10	2	TS000169R	Bushing				
12	1	TS000170R	Frame				
13	1	TS000171R	Hood support			Destra; Right	
14	1	TS000172R	Support			Destra; Right	
15	4	TS000014R	Washer				
16	1	TS000015R	Bumper				
17	4	TS000173R	Bushing				
18	1	TS000016R	Bumper				
19	1	TS000017R	Lower hood				
22	1	TS000174R	Hood support			Sinistra; Left	
23	1	TS000175R	Support			Sinistra; Left	
25	2	TS000176R	Plate				
26	1	TS000177R	Column support				
28	1	TS000178R	Left footboard support				
29	1	TS000179R	Footrest pad			Sinistra; Left	
30	1	TS000180R	Left footboard cover				
31	1	TS000181R	Frame				
32	2	TS000182R	Support				
33	1	TS000183R	Left footboard support				
34	1	TS000184R	Support			Sinistra; Left	
35	2	TS000185R	Support				
36	1	TS000186R	Support			Destra; Right	
37	1	TS000187R	Support			Sinistra; Left	
41	1	TS000188R	Support				
42	1	TS000189R	Bracket				
43	1	TS000190R	Hook			Sinistra; Left	
44	1	TS000191R	Hook			Destra; Right	
45	2	TS000192R	Screw				
47	2	TS000193R	Spring				
48	1	TS000194R	Left bracket				
49	1	TS000195R	Right bracket				
51	1	TS000196R	Support			Destra; Right	
52	1	TS000197R	Bracket				

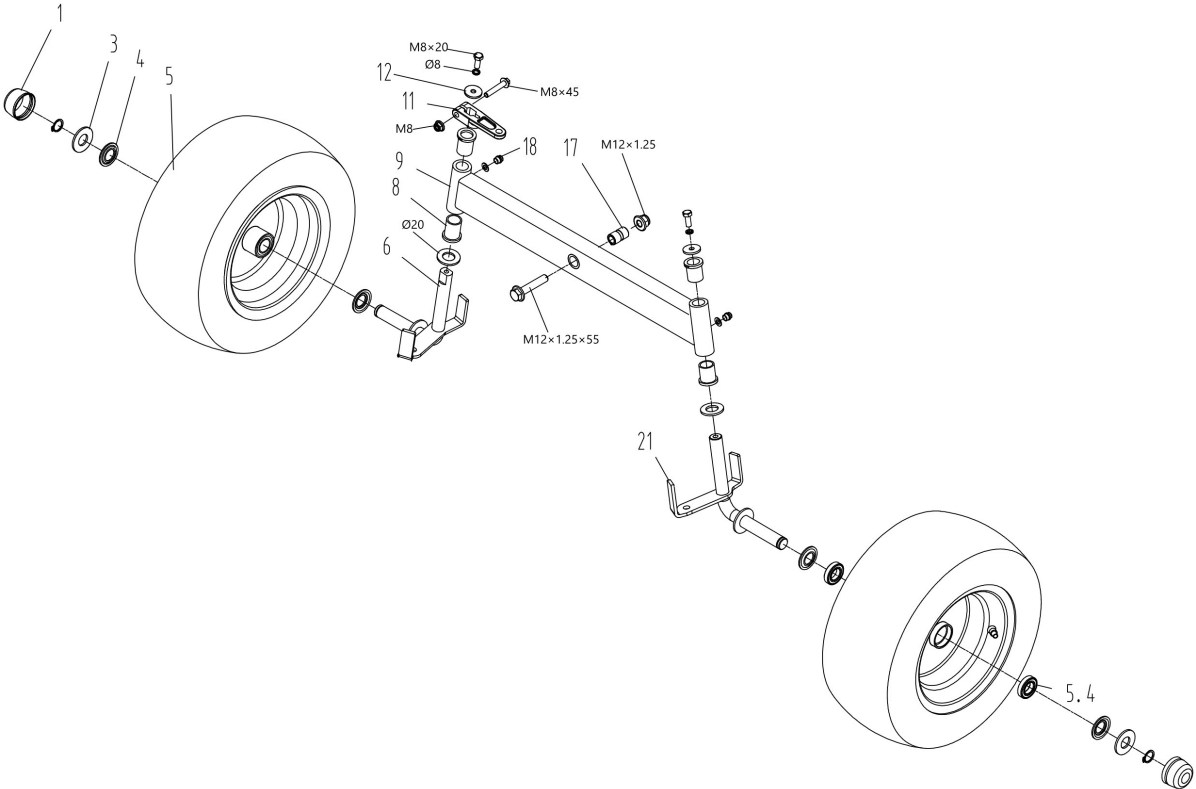 


www.agrodialog.ru

изображение Front axle

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	TS000198R	Hub cap				
3	2	TS000199R	Washer				
4	4	TS000200R	Spacer				
5	2	TS000018R	Compl. front wheel				
5,4	4	TS000204R	Thrust bearing				
6	1	TS000019R	Pin			Destro; Right	
8	4	TS000020R	Bushing				
9	1	TS000205R	Front axle				
11	1	TS000021R	Lever				
12	2	TS000083R	Washer				
17	1	TS000206R	Spacer				
18	2	TS000068R	Nipple				
21	1	TS000022R	Pin			Sinistro; Left	

 
www.agrodialog.ru

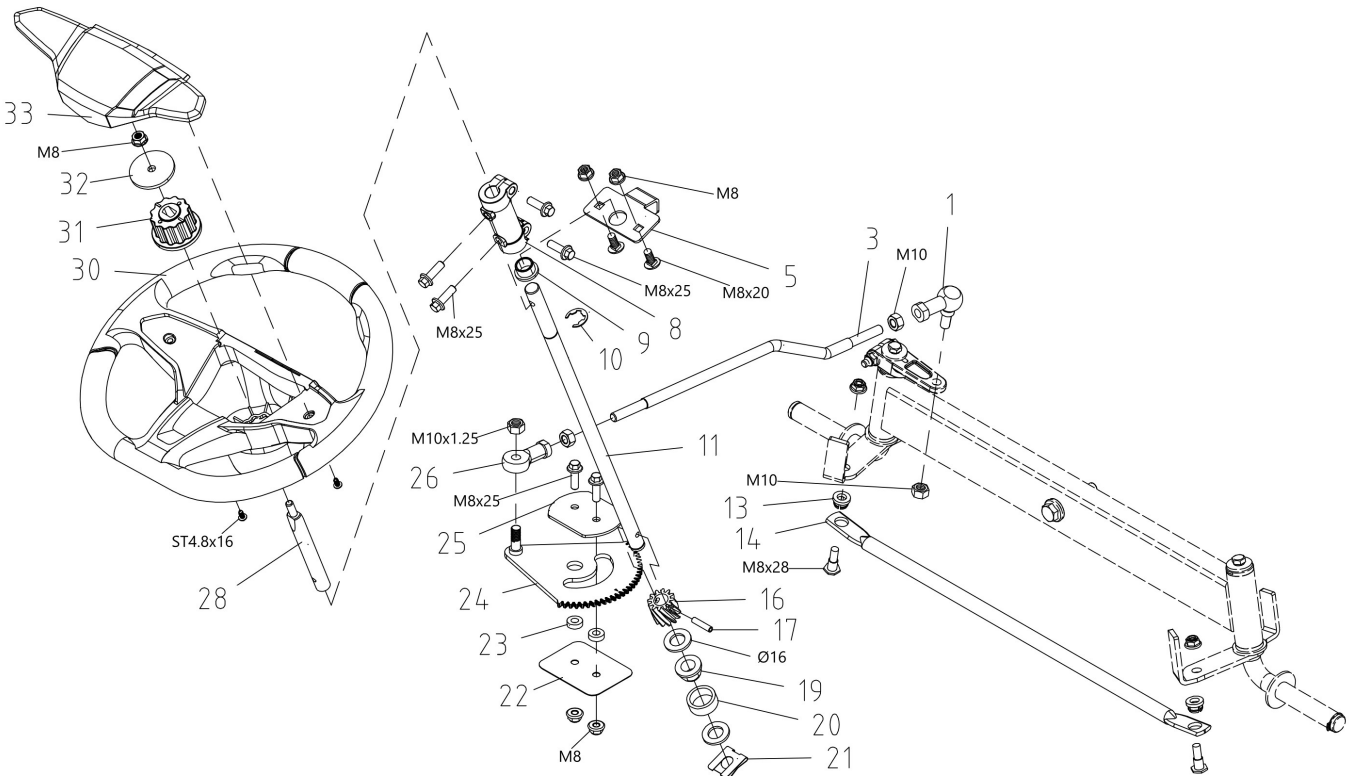

www.agrodialog.ru

изображение Steering arm


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000267R	Joint				
3	1	TS000268R	Tie rod				
5	1	TS000269R	Plate				
8	1	TS000270R	Sleeve				
9	1	TS000271R	Bushing				
10	1	TS000272R	Snap ring				
11	1	TS000273R	Steering arm				
13	2	TS000274R	Bushing				
14	1	TS000275R	Tie rod				
16	1	TS000026R	Sprocket				
17	1	TS000276R	Pin				
19	1	TS000378R	Bushing				
20	1	TS000277R	Bushing				
21	1	TS000278R	Cotter pin				
22	1	TS000279R	Fixing plate				
23	2	TS000280R	Bushing				
24	1	TS000027R	Sector				
25	1	TS000281R	Fixing plate				
26	1	TS000282R	Joint				
28	1	TS000283R	Spacer				
30	1	TS000284R	Steering wheel				
31	1	TS000028R	Support				
32	1	TS000379R	Washer				
33	1	TS000375R	Cover			Rosso - Red	

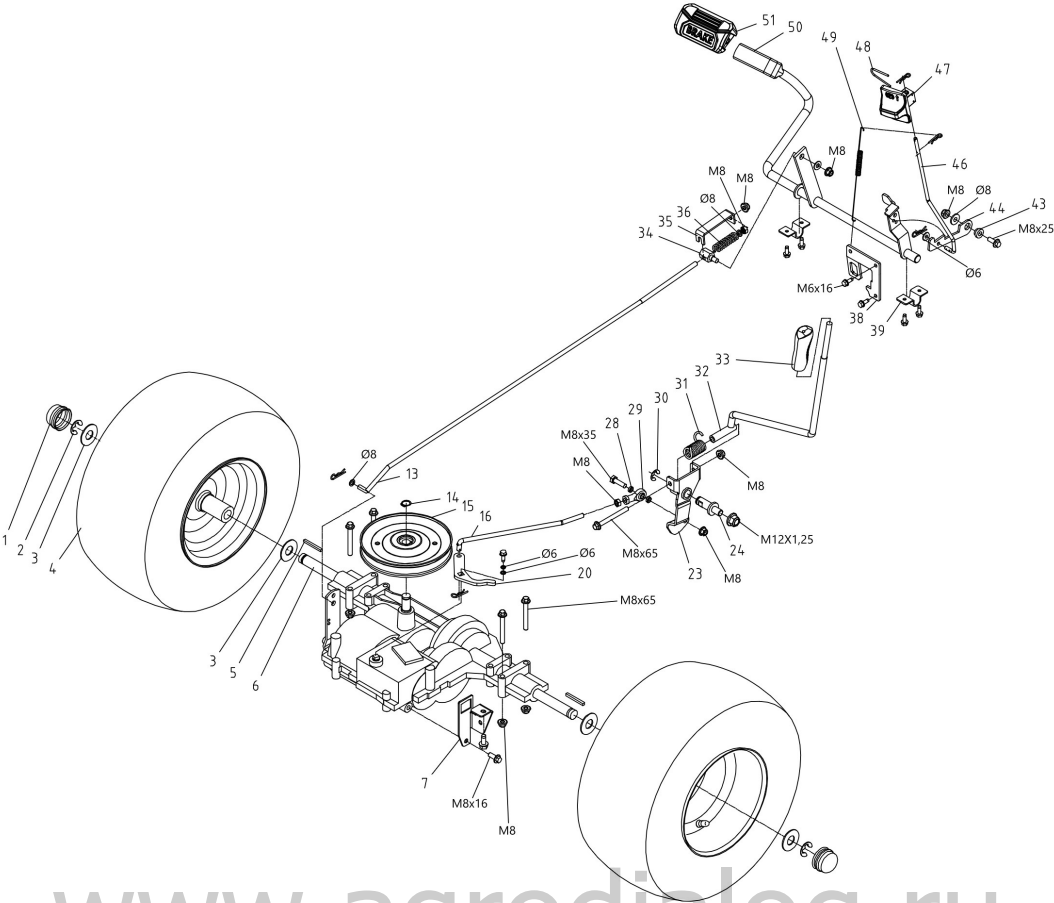 

www.agrodialog.ru

изображение Rear axle


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	TS000198R	Hub cap				
2	2	TS000207R	Snap ring				
3	4	TS000199R	Washer				
4	2	TS000212R	Compl. rear wheel				
5	2	TS000210R	Key				
6	1	TS000211R	Transmission				
7	1	TS000213R	Support				
13	1	TS000214R	Brake rod				
14	1	TS000215R	Snap ring				
15	1	TS000216R	Pulley				
16	1	TS000217R	Control rod				
20	1	TS000218R	Gearbox lever				
23	1	TS000219R	Gearbox lever				
24	1	TS000220R	Pin (lever)				
28	2	TS000221R	Spacer				
29	1	TS000222R	Joint				
30	1	TS000223R	Snap ring				
31	1	TS000224R	Spring				
32	1	TS000225R	Gearbox lever				
33	1	TS000226R	Knob				
34	1	TS000227R	Joint				
35	1	TS000228R	Plate				
36	1	TS000229R	Spring				
38	1	TS000230R	Support				
39	2	TS000231R	Support				
43	1	TS000232R	Bushing				
44	1	TS000233R	Compl.brake lever				
46	1	TS000234R	Control rod				
47	1	TS000235R	Handle				
48	1	TS000236R	Fork				
49	1	TS000237R	Spring				
50	1	TS000238R	Brake pedal				
51	1	TS000239R	Cover moulding				

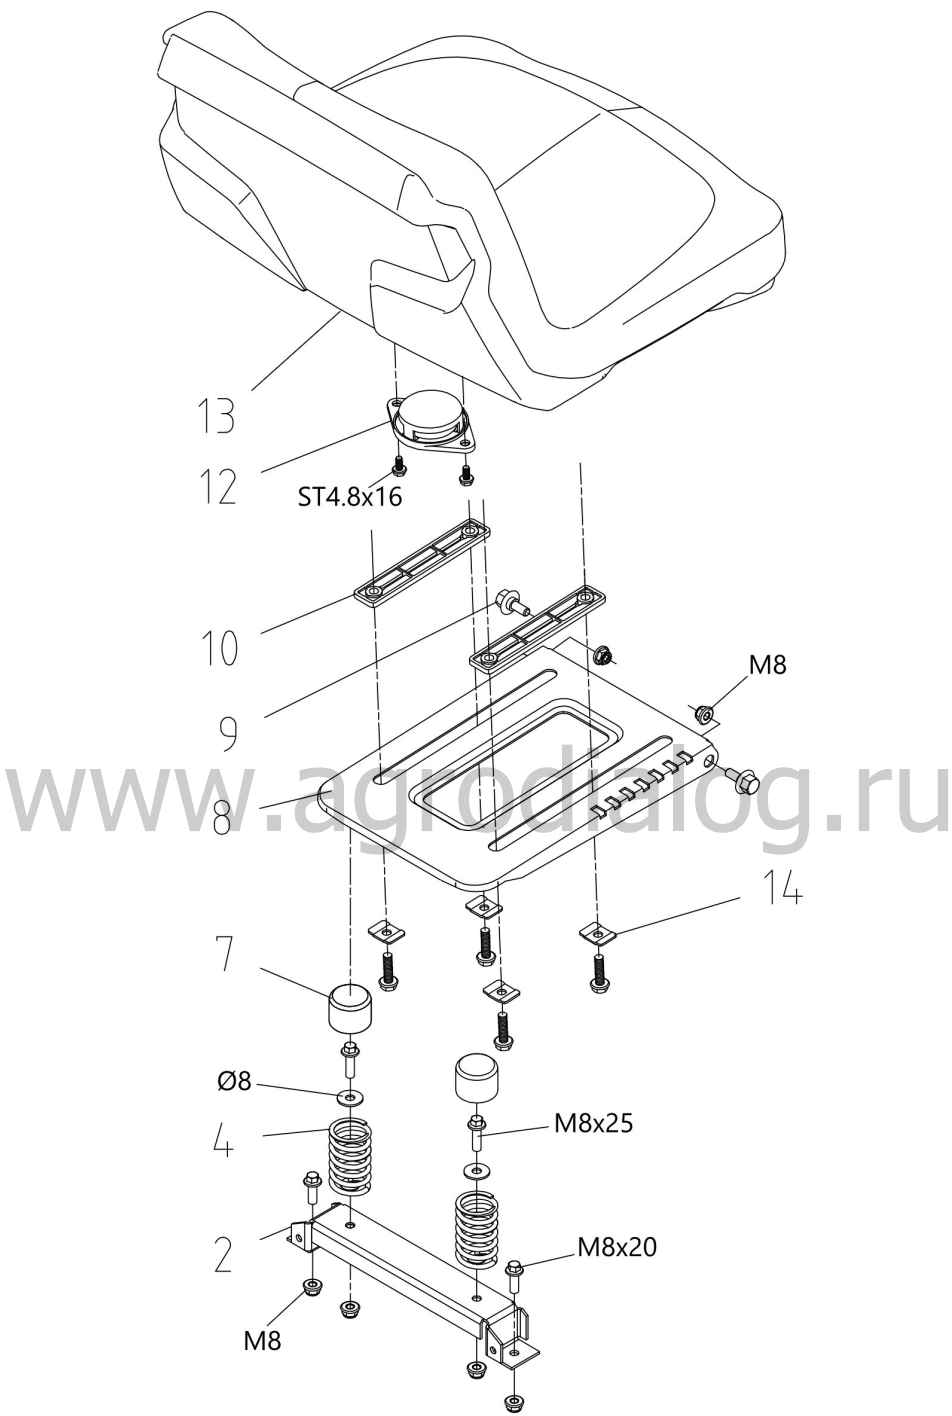 

изображение Seat

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000285R	Bar				
4	2	TS000286R	Spring				
7	2	TS000287R	Cover				
8	1	TS000288R	Seat support				
9	2	TS000289R	Screw				
10	2	TS000290R	Slide				
12	1	TS000029R	Seat switch				
13	1	TS000372R	Seat			Rosso - Red	
14	4	TS000291R	Spacer				

 www.agrodialog.ru

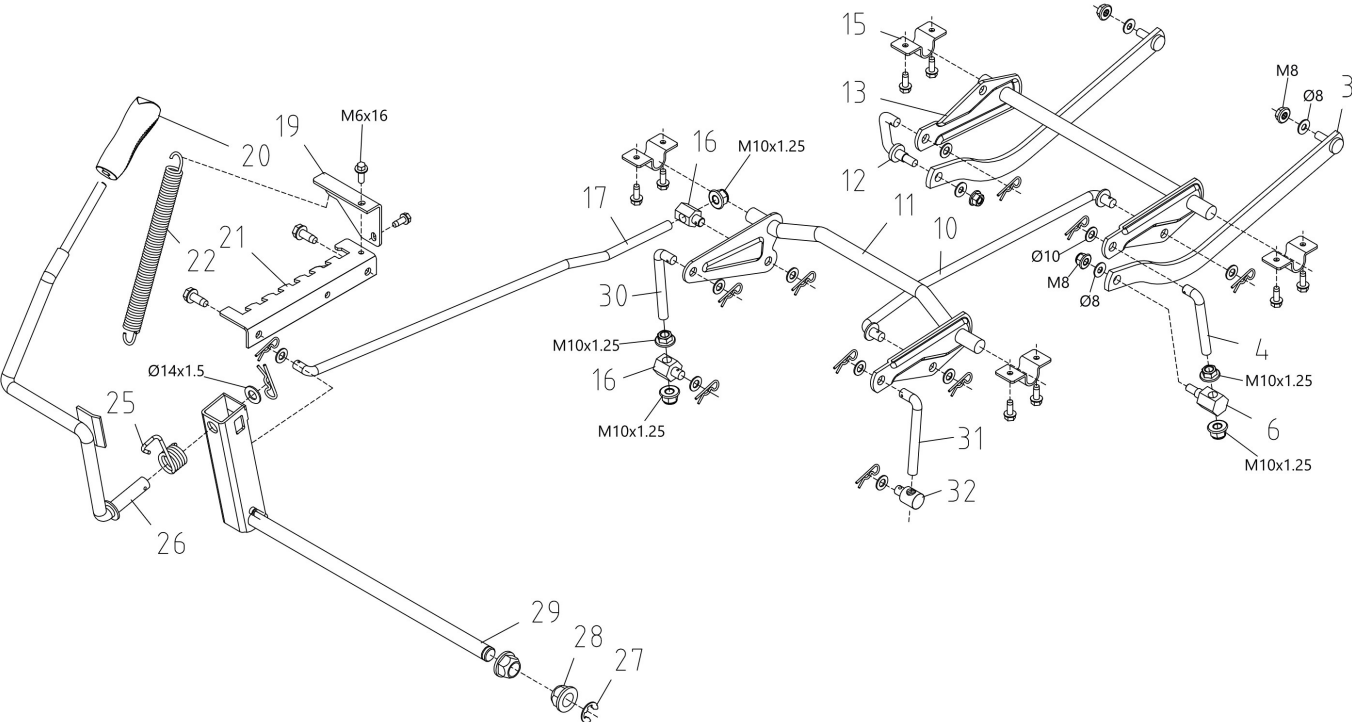


www.agrodialog.ru

изображение Cutting plate lifting


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
3	2	TS000292R	Rod				
4	1	TS000293R	Tie rod				
6	1	TS000294R	Joint				
10	1	TS000295R	Rod				
11	1	TS000296R	Axel lift				
12	1	TS000297R	Rod				
13	1	TS000298R	Support				
15	4	TS000231R	Support				
16	2	TS000299R	Joint				
17	1	TS000300R	Rod				
19	1	TS000301R	Plate				
20	1	TS000226R	Knob				
21	1	TS000030R	Support				
22	1	TS000302R	Spring				
25	1	TS000303R	Spring				
26	1	TS000031R	Lever				
27	1	TS000223R	Snap ring				
28	2	TS000378R	Bushing				
29	1	TS000304R	Lever				
30	1	TS000305R	Tie rod				
31	1	TS000306R	Tie rod				
32	1	TS000307R	Joint				

 www.agrodialog.ru

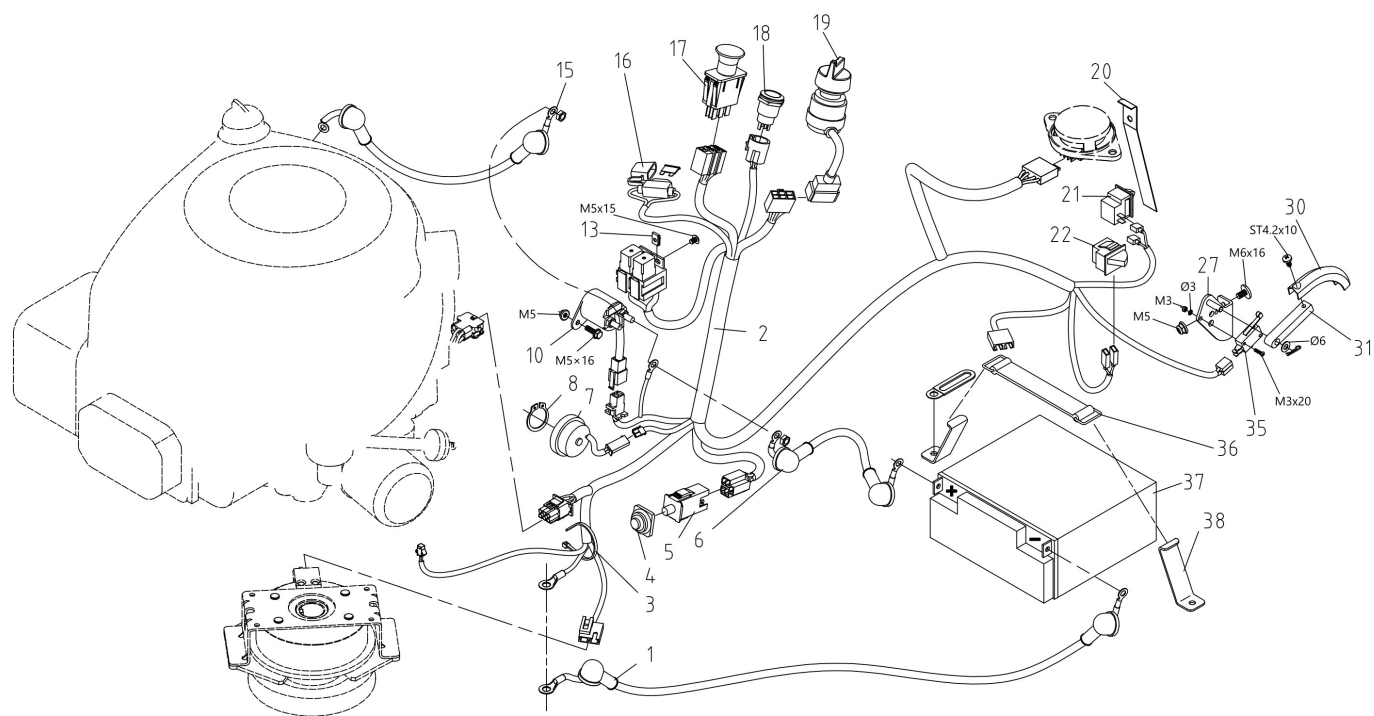


www.agrodialog.ru

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000314R	Battery cables				
2	1	TS000315R	Wiring				
3	20	TS000316R	Band				
3	5	TS000317R	Band				
4	1	TS000318R	Switch protection				
5	1	TS000032R	Switch				
6	1	TS000319R	Battery cables				
7	1	TS000320R	Indicator				
8	1	TS000321R	Snap ring				
10	1	TS000033R	Solenoid				
13	1	TS000323R	Clamp				
15	1	TS000324R	Wire				
16	1	TS000325R	Fuse				
17	1	TS000034R	Switch				
18	1	TS000326R	Switch				
19	1	TS000035R	Shoe				
20	1	TS000327R	Bracket				
21	1	TS000036R	Micro-switch				
22	1	TS000037R	Micro-switch				
27	1	TS000328R	Fixing plate				
30	1	TS000329R	Lever				
31	1	TS000330R	Lever				
35	1	TS000331R	Switch				
36	1	TS000332R	Belt				
37	1	TS000038R	Battery				
38	2	TS000333R	Bracket				

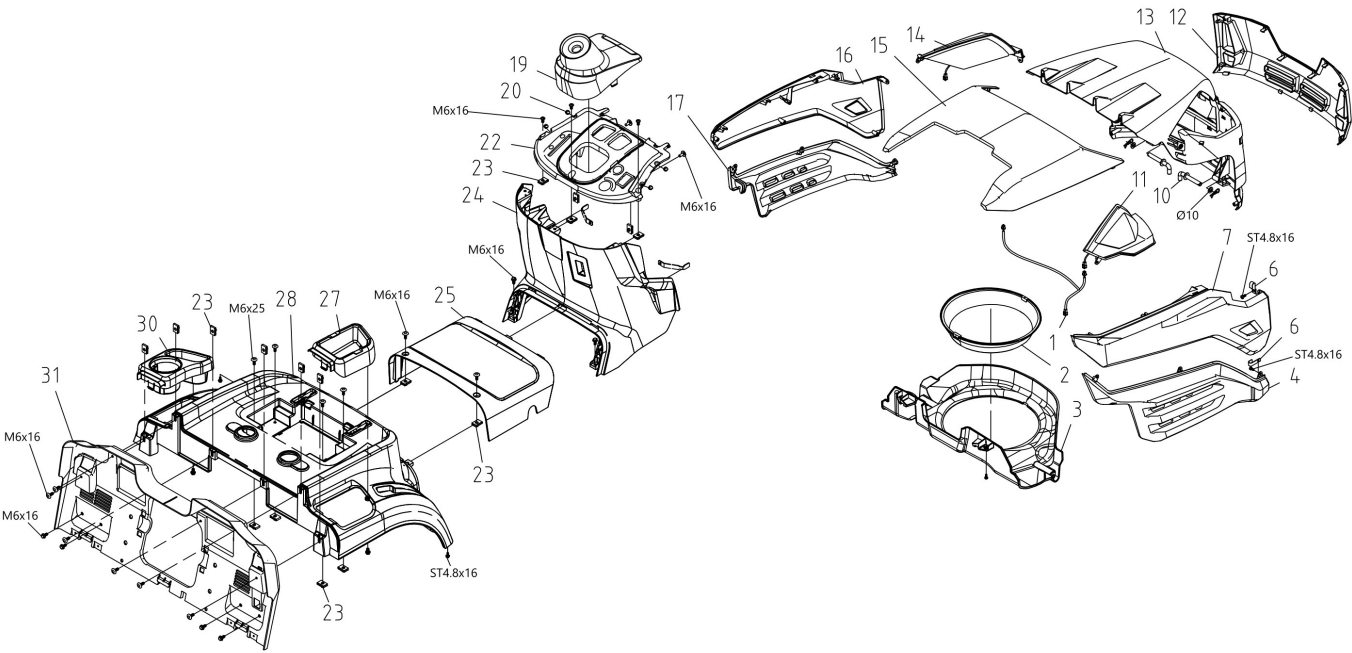 

www.agrodialog.ru


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000340R	Wiring				
2	1	TS000341R	Adapter				
3	1	TS000342R	Deflector				
4	1	TS000343R	Right guard				
6	5	TS000344R	Fairled				
7	1	TS000360R	Right guard			Rosso - Red	
10	2	TS000345R	Pin				
11	1	TS000346R	Headlamp				
12	1	TS000363R	Guard			Rosso - Red	
13	1	TS000039R	Upper hood				
14	1	TS000347R	Headlamp				
15	1	TS000366R	Engine cover			Rosso - Red	
16	1	TS000369R	Left guard			Rosso - Red	
17	1	TS000348R	Left guard				
19	1	TS000349R	Cover				
20	4	TS000350R	Shock absorber				
22	1	TS000351R	Dashboard				
23	15	TS000066R	Clamp				
24	1	TS000352R	Panel				
25	1	TS000040R	Cover				
27	1	TS000353R	Housing				
28	1	TS000041R	Wheels cover				
30	1	TS000354R	Housing				
31	1	TS000355R	Panel				

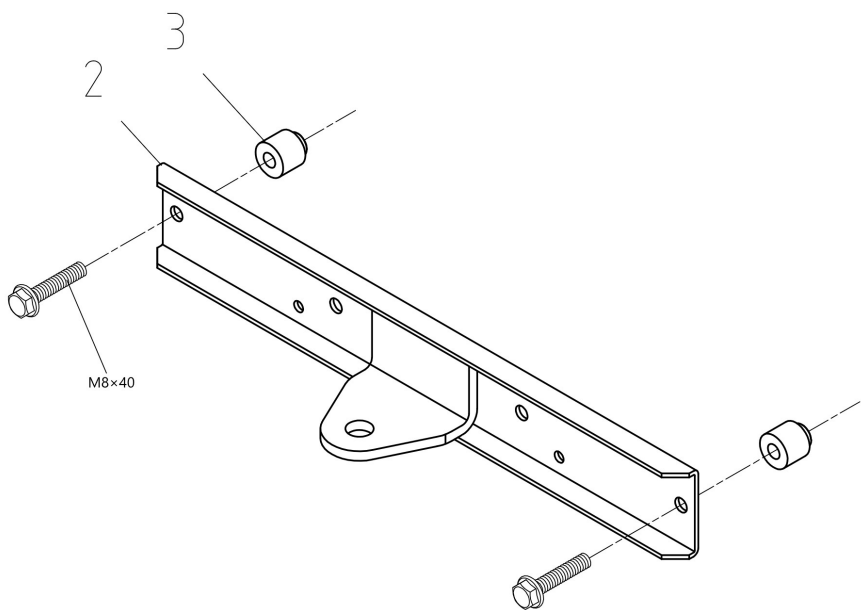 

www.agrodialog.ru

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000358R	Towing hitch				
3	2	TS000359R	Spacer				

 
www.agrodialog.ru

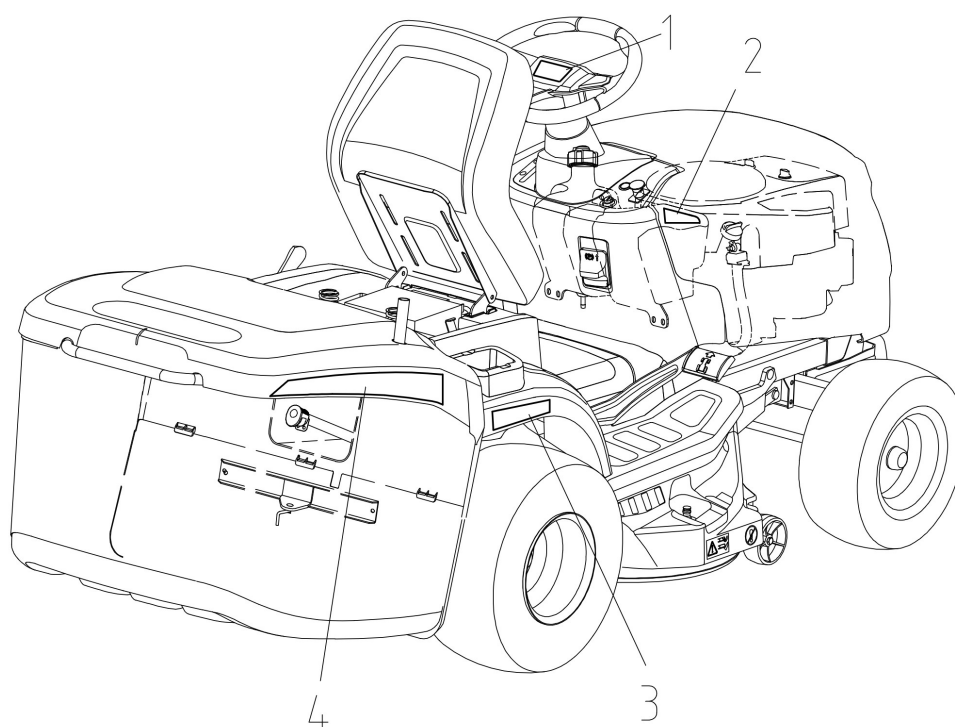

www.agrodialog.ru

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000405R	Label				
2	1	TS000396R	Label				
3	1	TS000386R	Label			86R/12,5KM	
4	1	TS000399R	Label			Destro - Right	
4	1	TS000400R	Label			Sinistro - Left	

 
www.agrodialog.ru

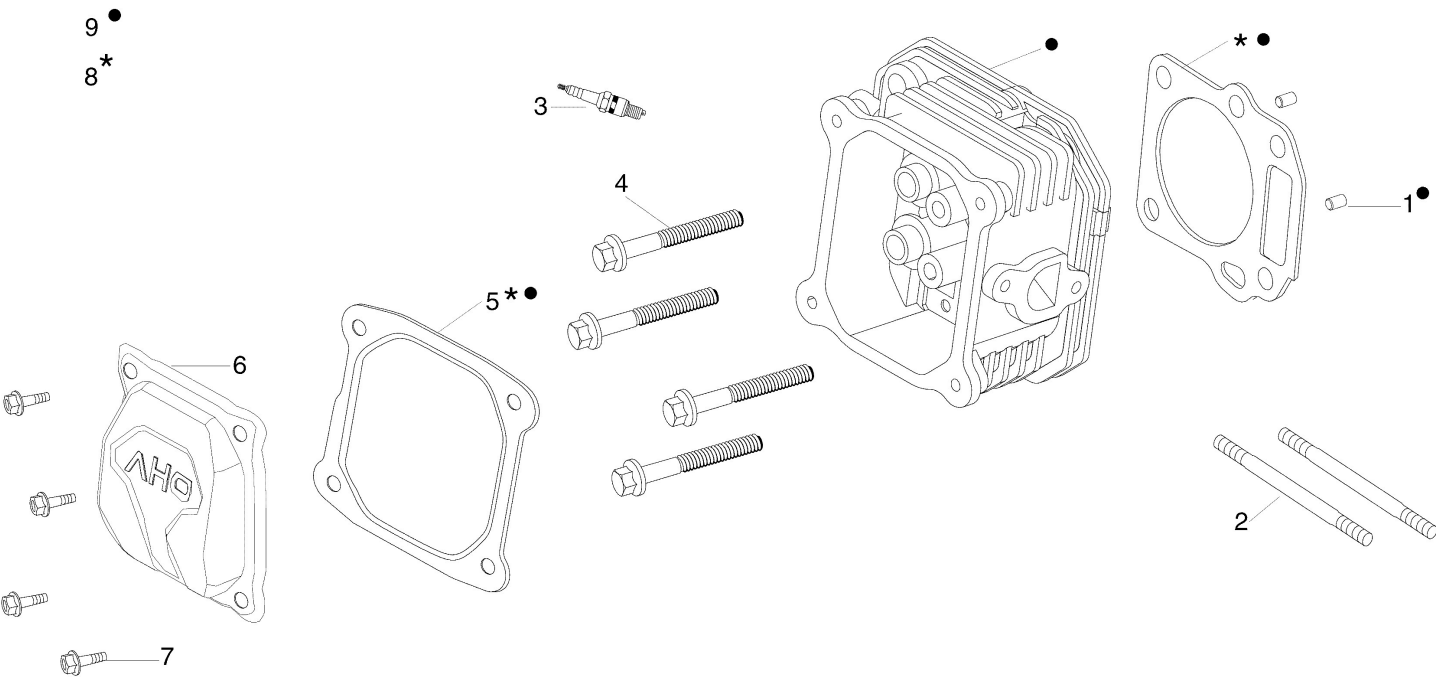

www.agrodialog.ru


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66150654	Pin				
2	2	L66150822	Stud				
3	1	3055122R	Spark plug				
4	4	L66150818	Bolt				
5	1	L66151483	Set cover				
6	1	L66150750	Cover				
7	1	L66150393	Screw				
8	1	L66151179	Gasket set				
9	1	L66151180	Head comp.cylinder				

 www.agrodialog.ru

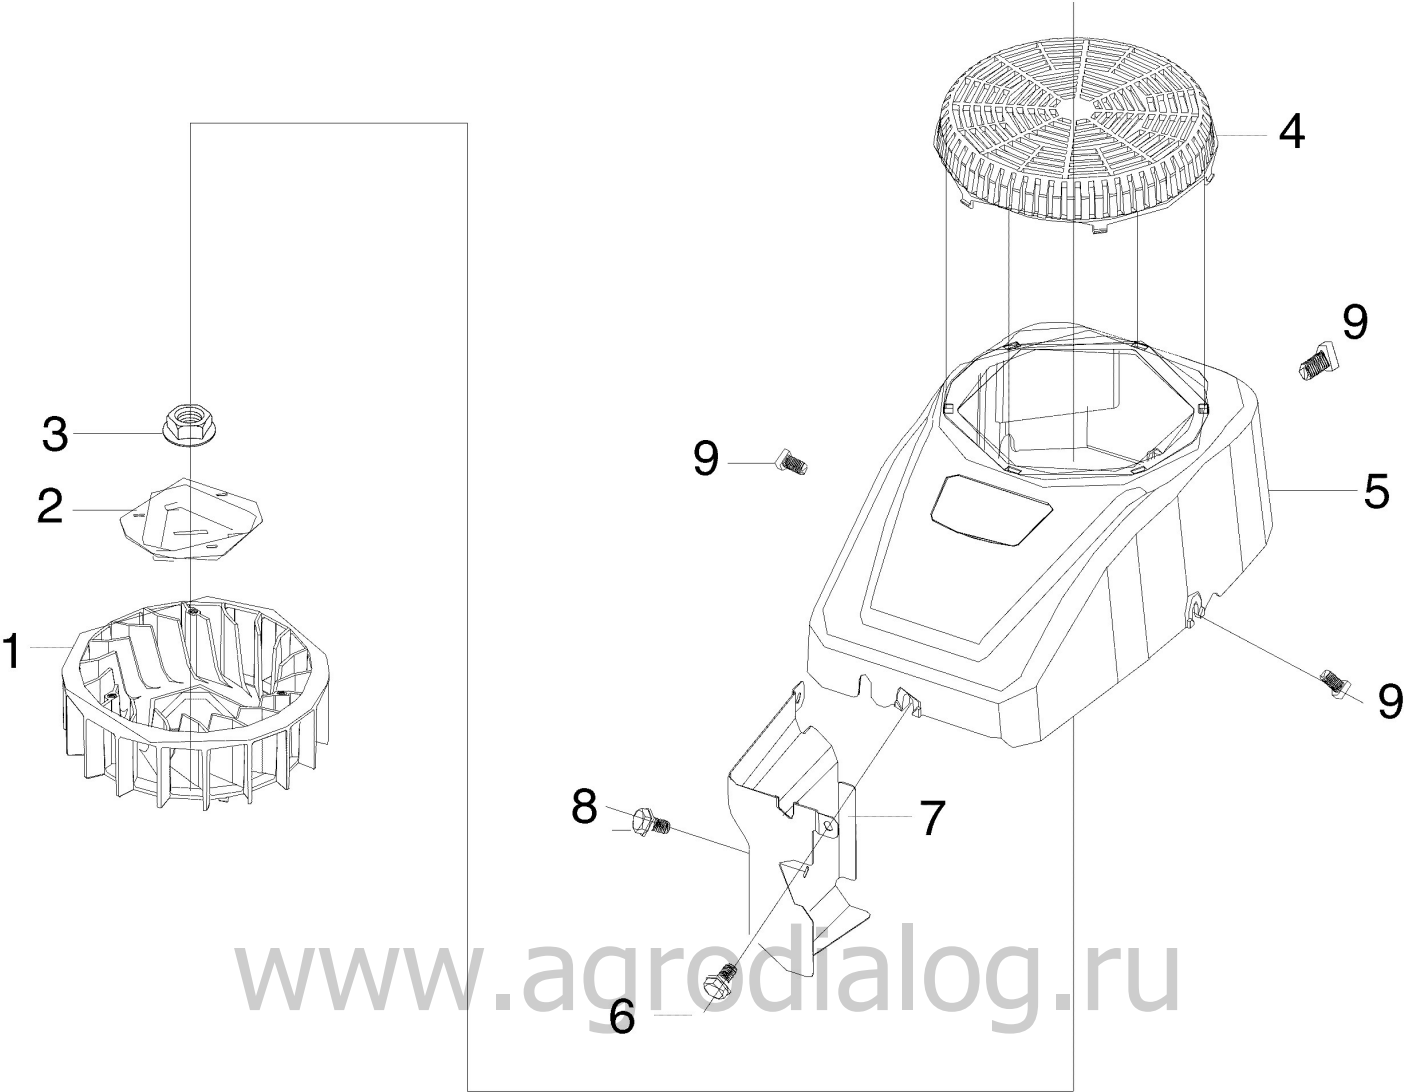

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150771	Fan				
2	1	L66150802	Pulley				
3	1	L66150823	Nut				
4	1	L66150803	Cover				
5	1	L66150775	Cover				
6	1	L66150818	Bolt				
7	1	L66150774	Guard				
8	1	L66150464	Screw				
9	3	L66150393	Screw				

 
www.agrodialog.ru

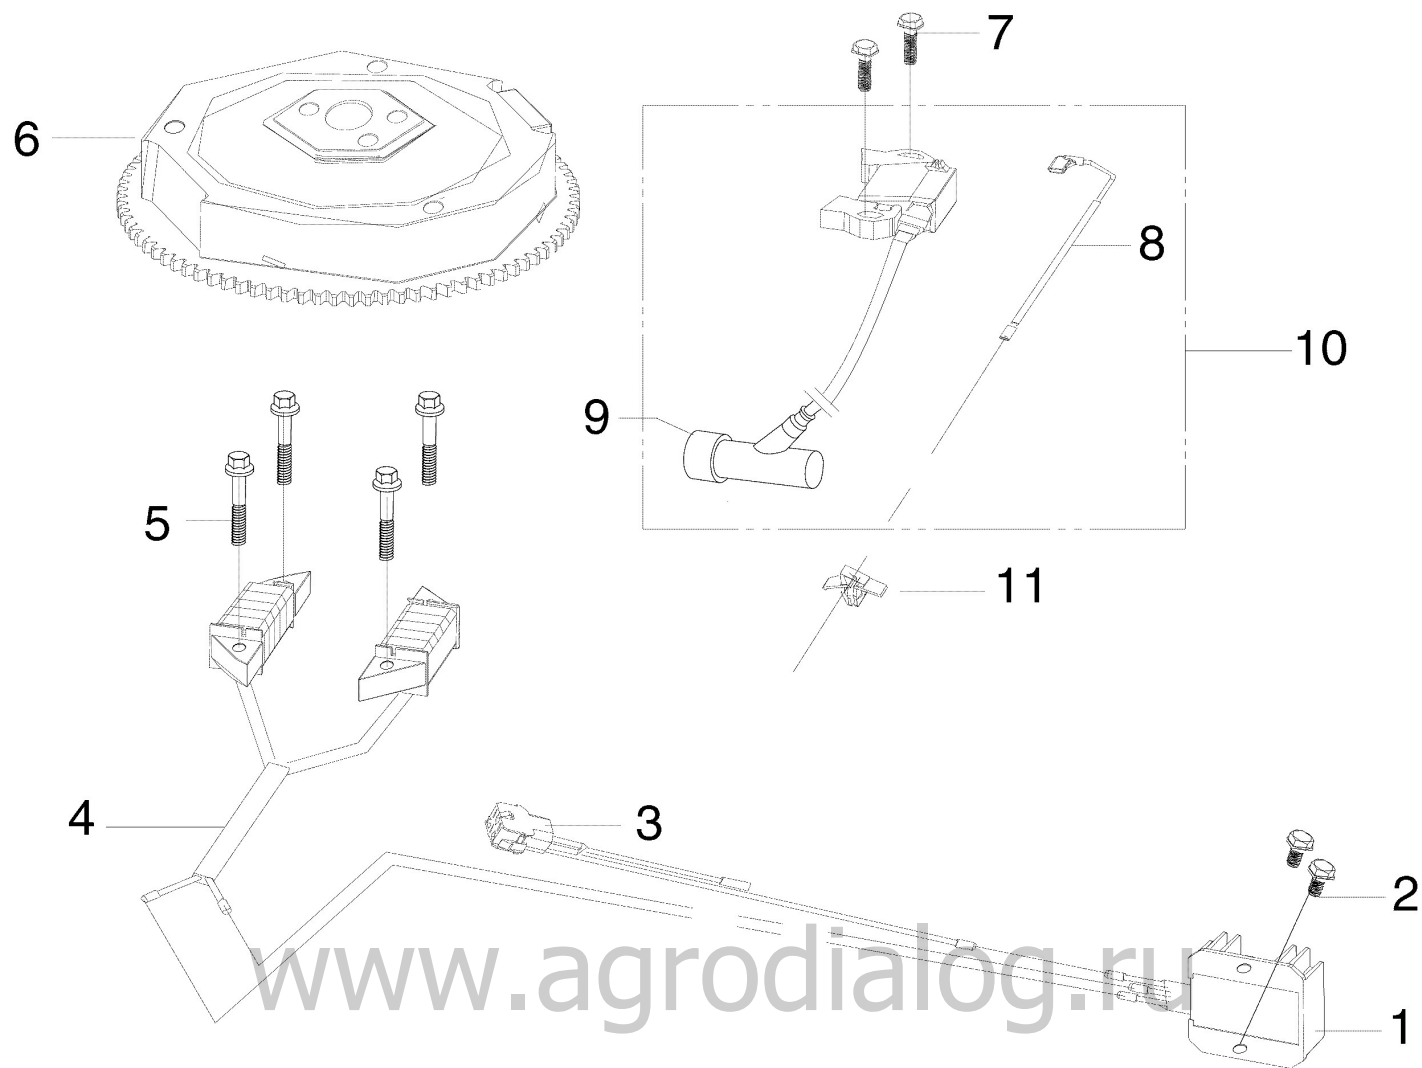

изображение Flywheel

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151485	Rectifier				
2	2	L66150464	Screw				
3	1	L66151486	Grip-end				
4	1	L66151487	Plate				
5	4	L66150816	Bolt				
6	1	L66150804	Flywheel				
7	2	L66150817	Bolt				
8	1	L66151495	Engine stop wire				
9	1	L66150810	Spark plug cap				
10	1	L66151488	Ignition coil				
11	1	L66151489	Clip				

 www.agrodialog.ru

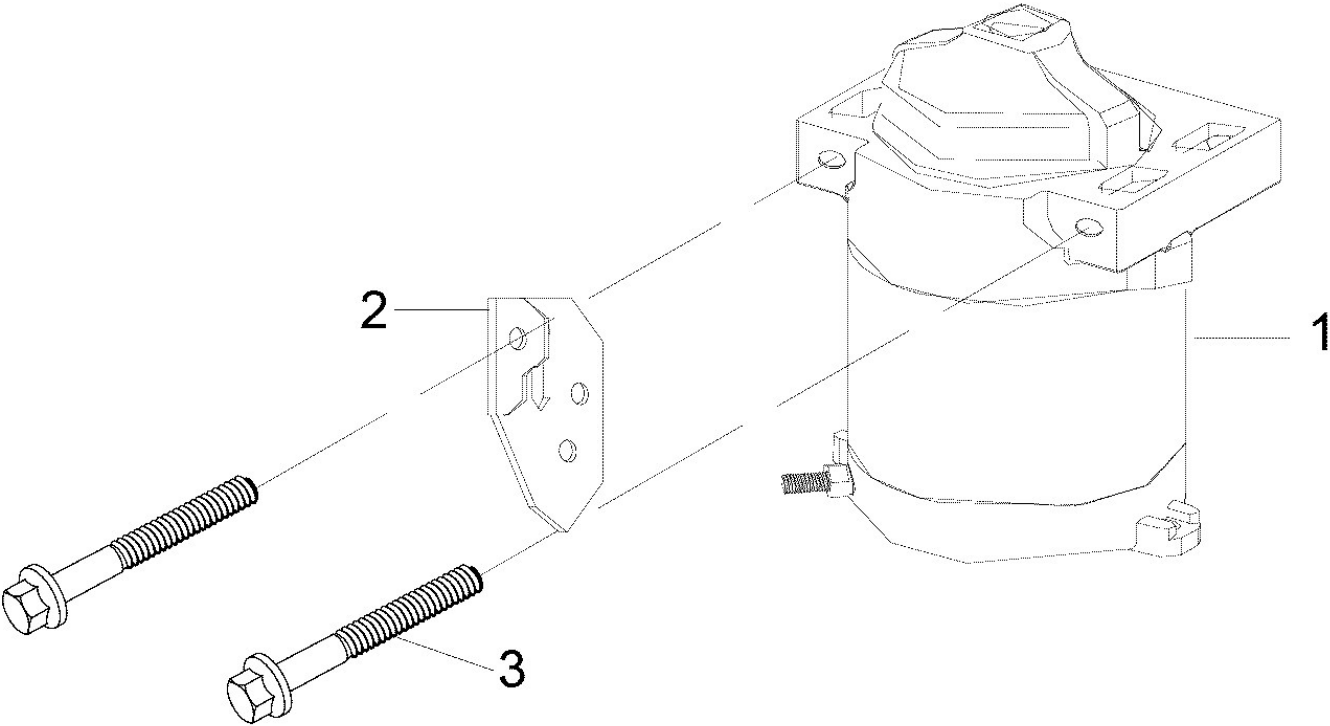


www.agrodialog.ru

изображение Starter lever

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151490	Starter lever				
2	1	L66150808	Bracket				
3	2	L66150821	Bolt				

 www.agrodialog.ru

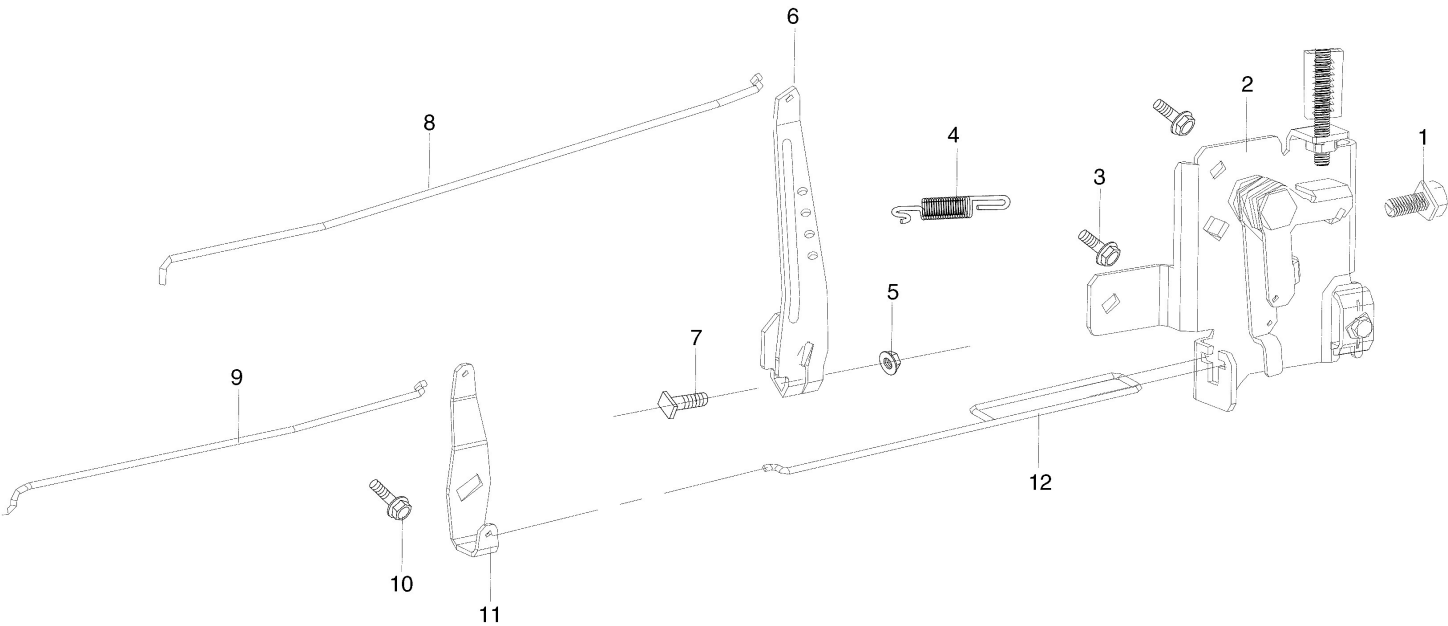


www.agrodialog.ru

изображение Control lever

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150251	Screw				
2	1	L66151491	Control				
3	2	L66150393	Screw				
4	1	L66150792	Spring				
5	1	004400959R	Nut				
6	1	L66150793	Governor arm shaft				
7	1	L66150382	Screw				
8	1	L66150791	Governor rod				
9	1	L66150790	Starter cable				
10	1	L66150813	Bolt				
11	1	L66150789	Plate				
12	1	L66150795	Throttle rod				

 www.agrodialog.ru



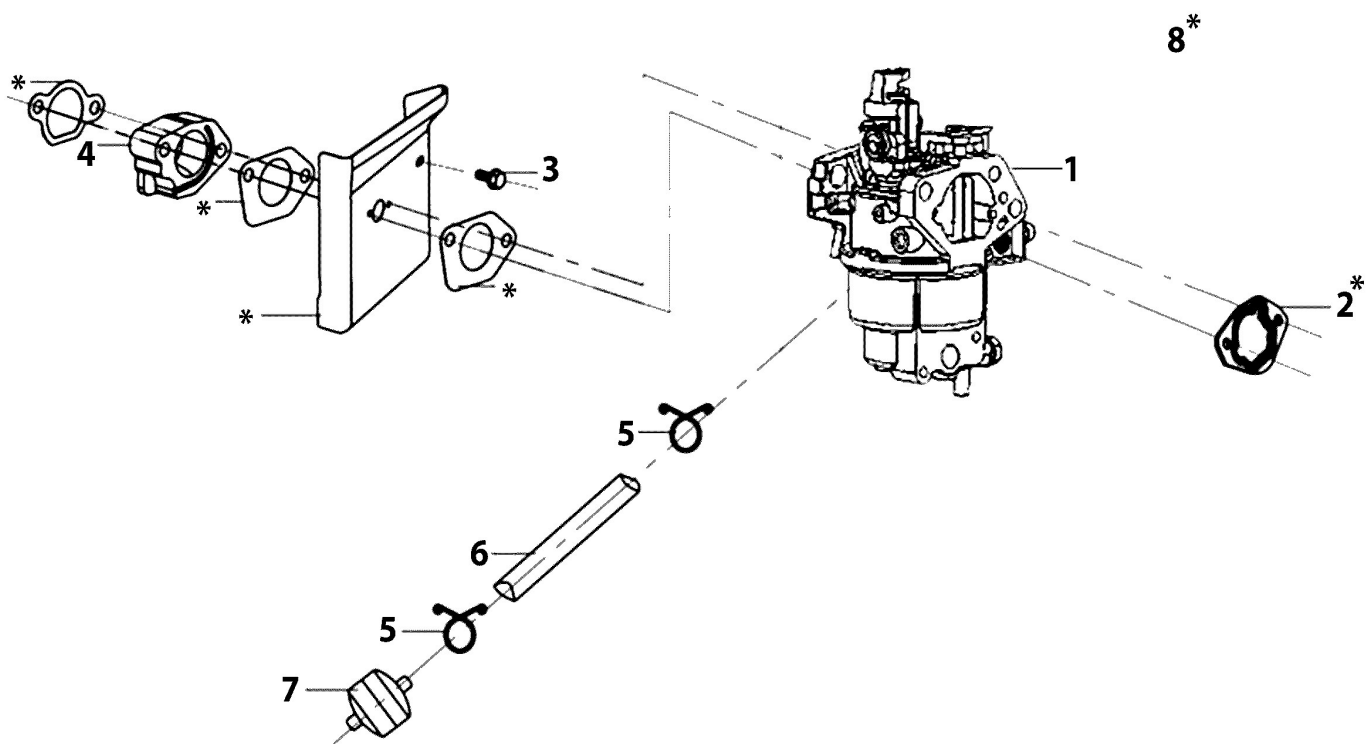


www.agrodialog.ru

изображение Carburetor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151183	Carburetor				
2	1	L66150956	Gasket				
3	1	L66150464	Screw				
4	1	L66150788	Insulator				
5	2	L66150749	Tube				
6	1	L66151492	Fuel hose				
7	1	L66151503	Fuel hose				
8	1	L66151179	Gasket set				

   
www.agrodialog.ru

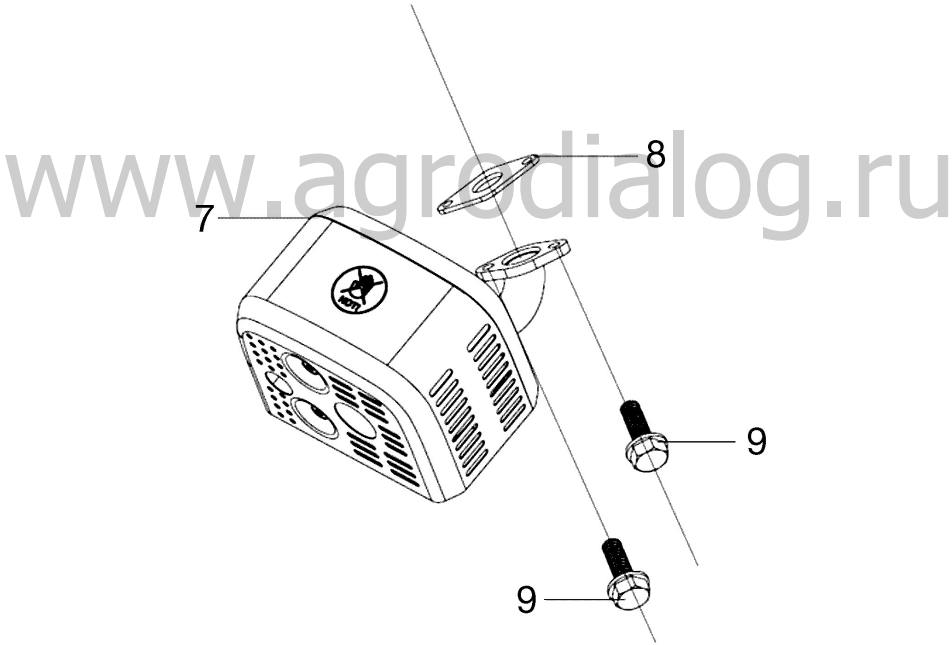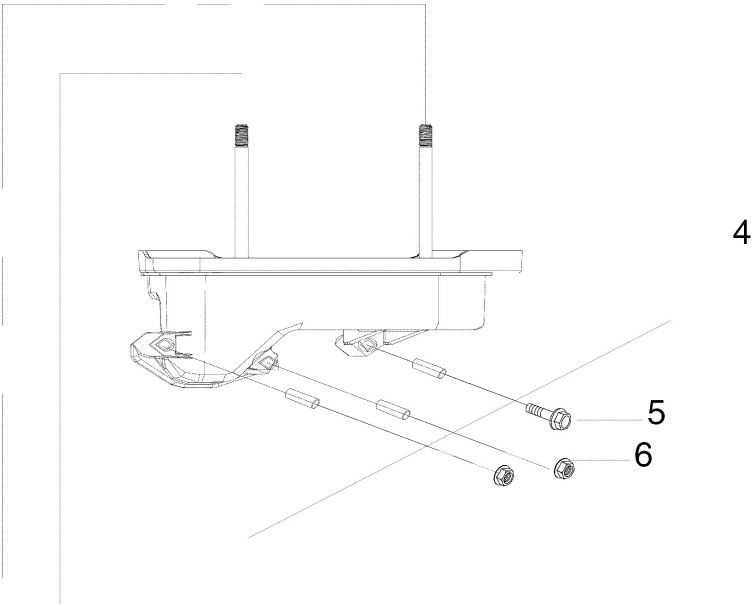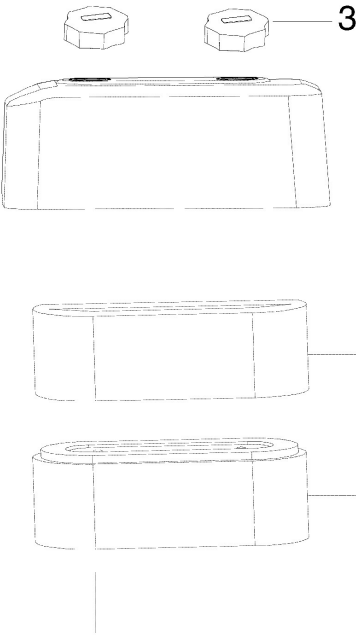

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150786	Filter				
2	1	L66150799	Filter				
3	2	L66150801	Bolt				
4	1	L66150798	Filter kit				
5	1	L66150453	Screw				
6	2	004400959R	Nut				
7	1	L66151184	Muffler assy				
8	1	L66150800	Gasket				
9	2	L66151185	Screw				


www.agrodialog.ru

 12●

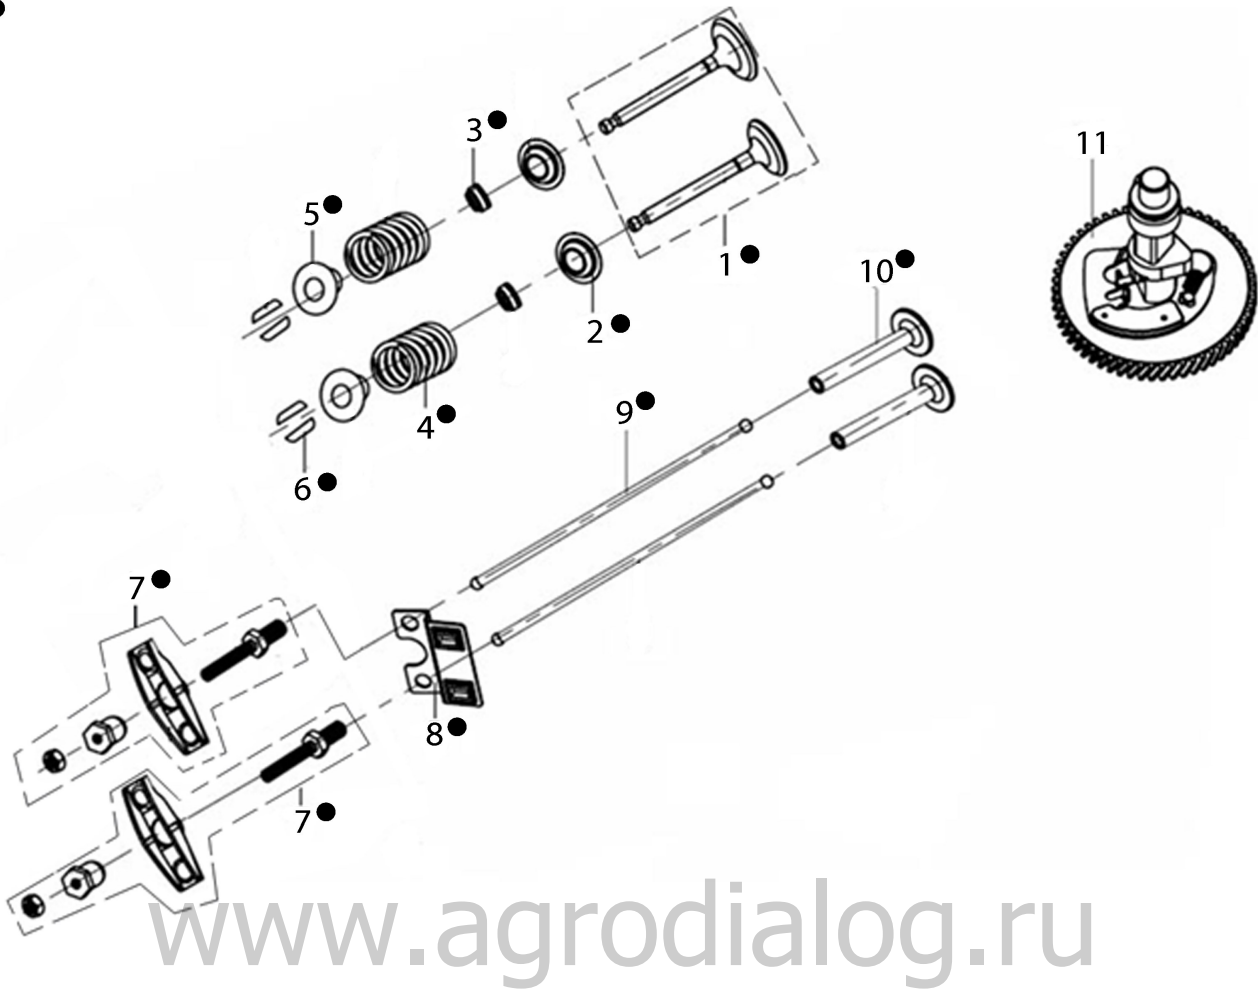

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150782	Suction/exhaust valve kit				
2	2	L66150560	Slide				
3	2	L66150561	Seal ring				
4	2	L66150559	Spring				
5	2	L66150558	Clamp				
6	4	L66150557	Valve				
7	2	L66150763	Compensator				
8	1	L66150766	Plate				
9	2	L66150764	Equalizer rod				
10	2	L66150554	Slide				
11	1	L66150762	Camshaft assy				
12	1	L66151180	Head comp.cylinder				

 www.agrodialog.ru

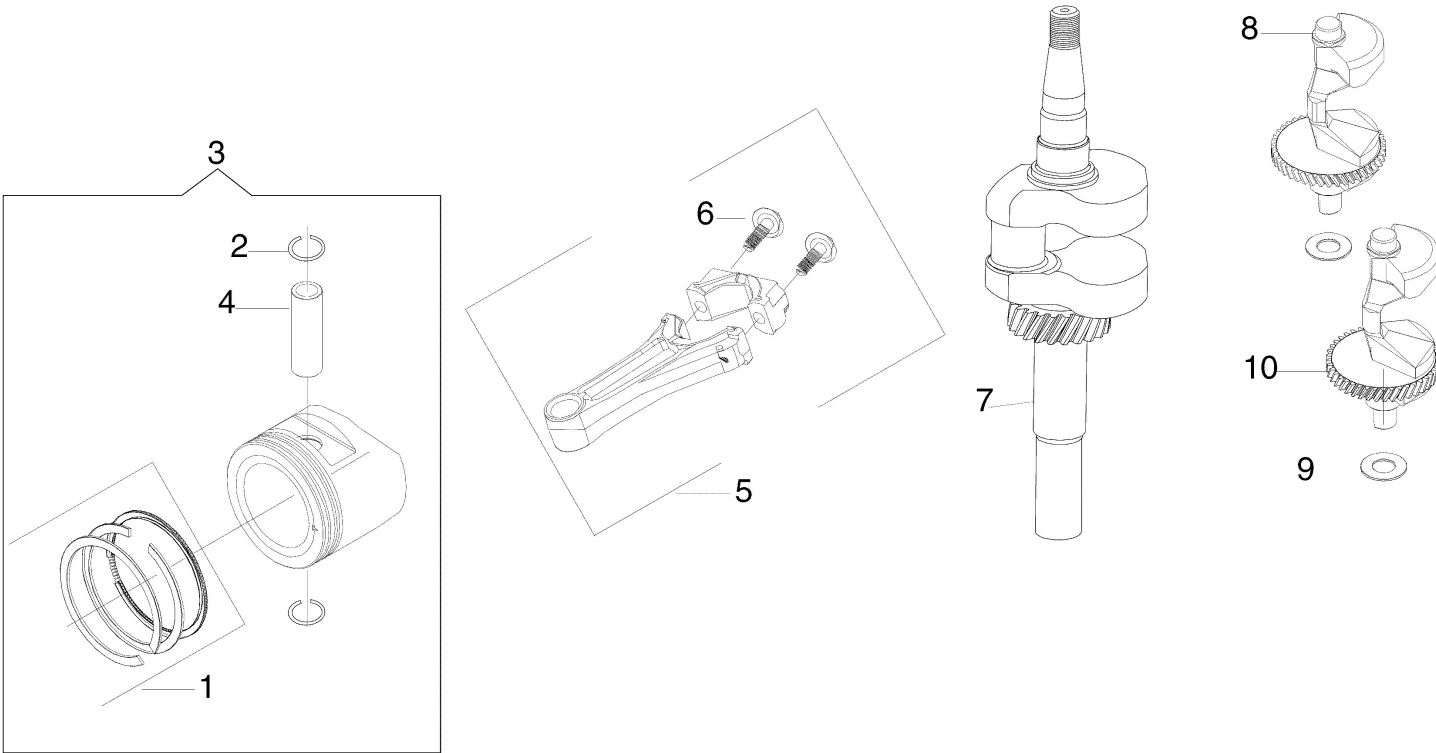


www.agrodialog.ru

изображение Crankshaft and piston

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151186	Piston ring set				
2	2	L66150669	Ring				
3	1	L66151182	Piston assy				
4	1	L66150693	Piston pin				
5	1	L66150758	Connecting rod cpl.				
6	2	L66150759	Bolt				
7	1	L66150760	Crankshaft				
8	1	L66150964	Compensator				
9	2	L66150825	Washer				
10	1	L66150963	Compensator				

www.agrodialog.ru

 
9 *

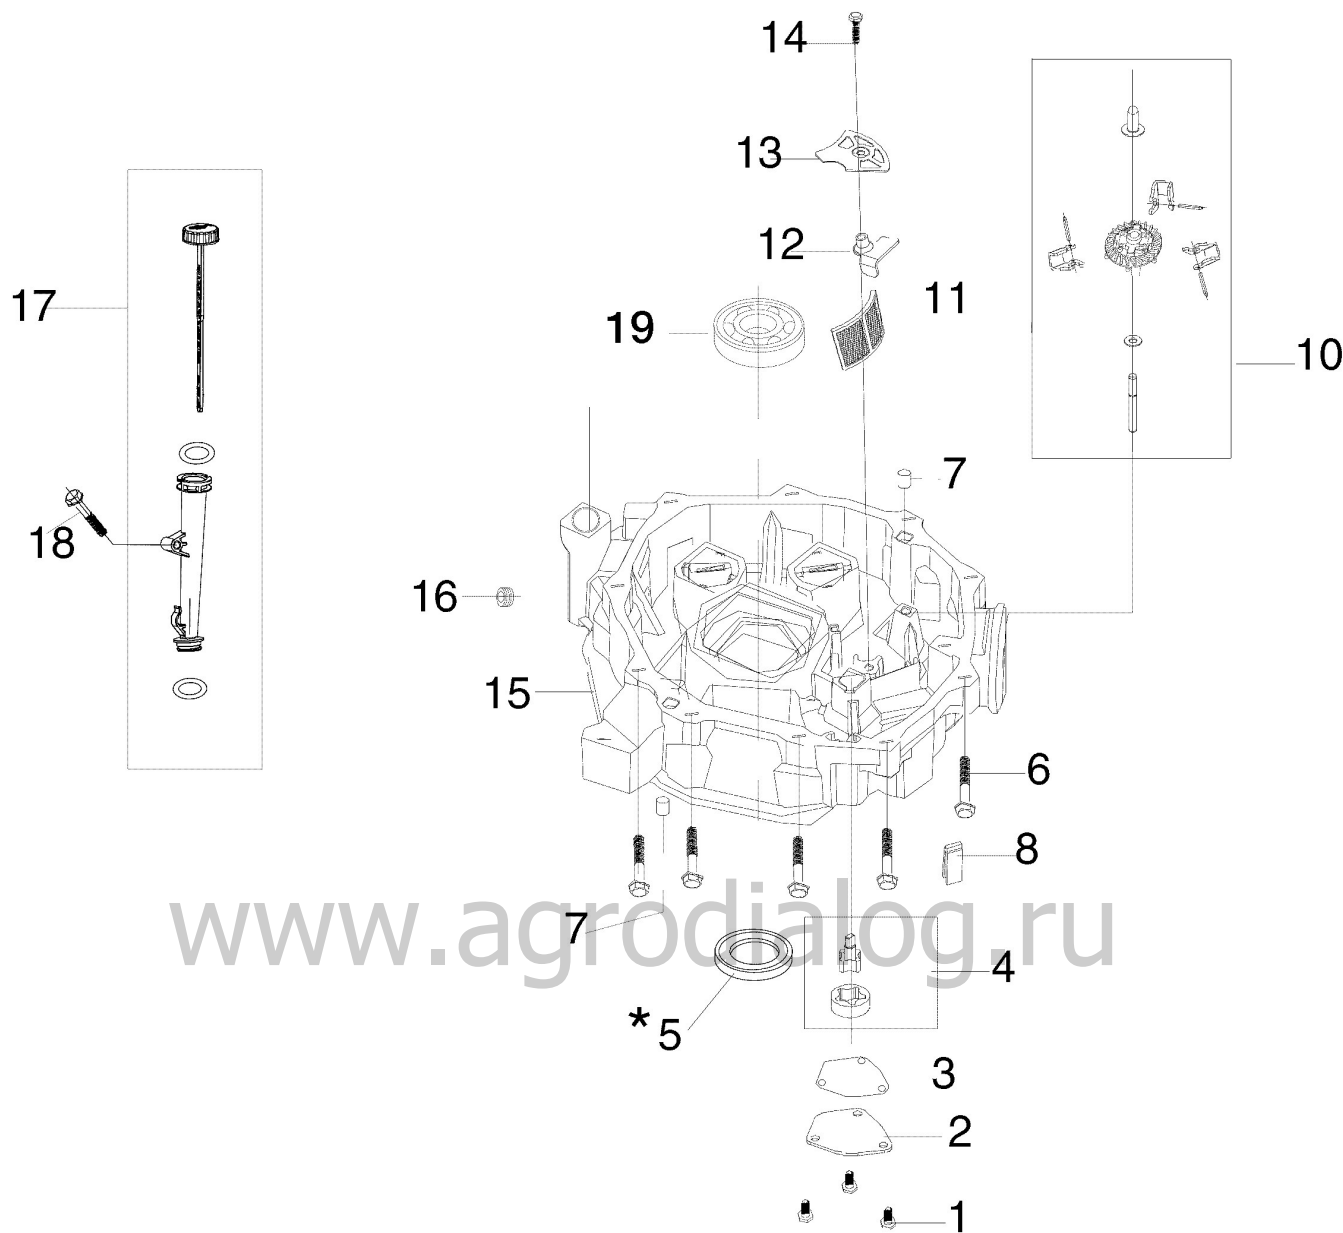

изображение Crankcase cover

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	L66150251	Screw				
2	1	L66150768	Oil pump cover				
3	1	L66150756	Seal ring				
4	1	L66150767	Oil pump				
5	1	L66150830	Oil seal				
6	10	L66150820	Bolt				
7	2	L66150828	Pin				
8	1	L66150772	Deflector				
9	1	L66151179	Gasket set				
10	1	L66150662	Governor				
11	1	L66150769	Oil filter				
12	1	L66150752	Plate				
13	1	L66150770	Filter cover				
14	1	L66150817	Bolt				
15	1	L66151493	Cover				
16	1	L66150743	Close nipple				
17	1	L66150740	Oil cap assy				
18	1	L66150453	Screw				
19	1	L66150665	Bearing				

 www.agrodialog.ru

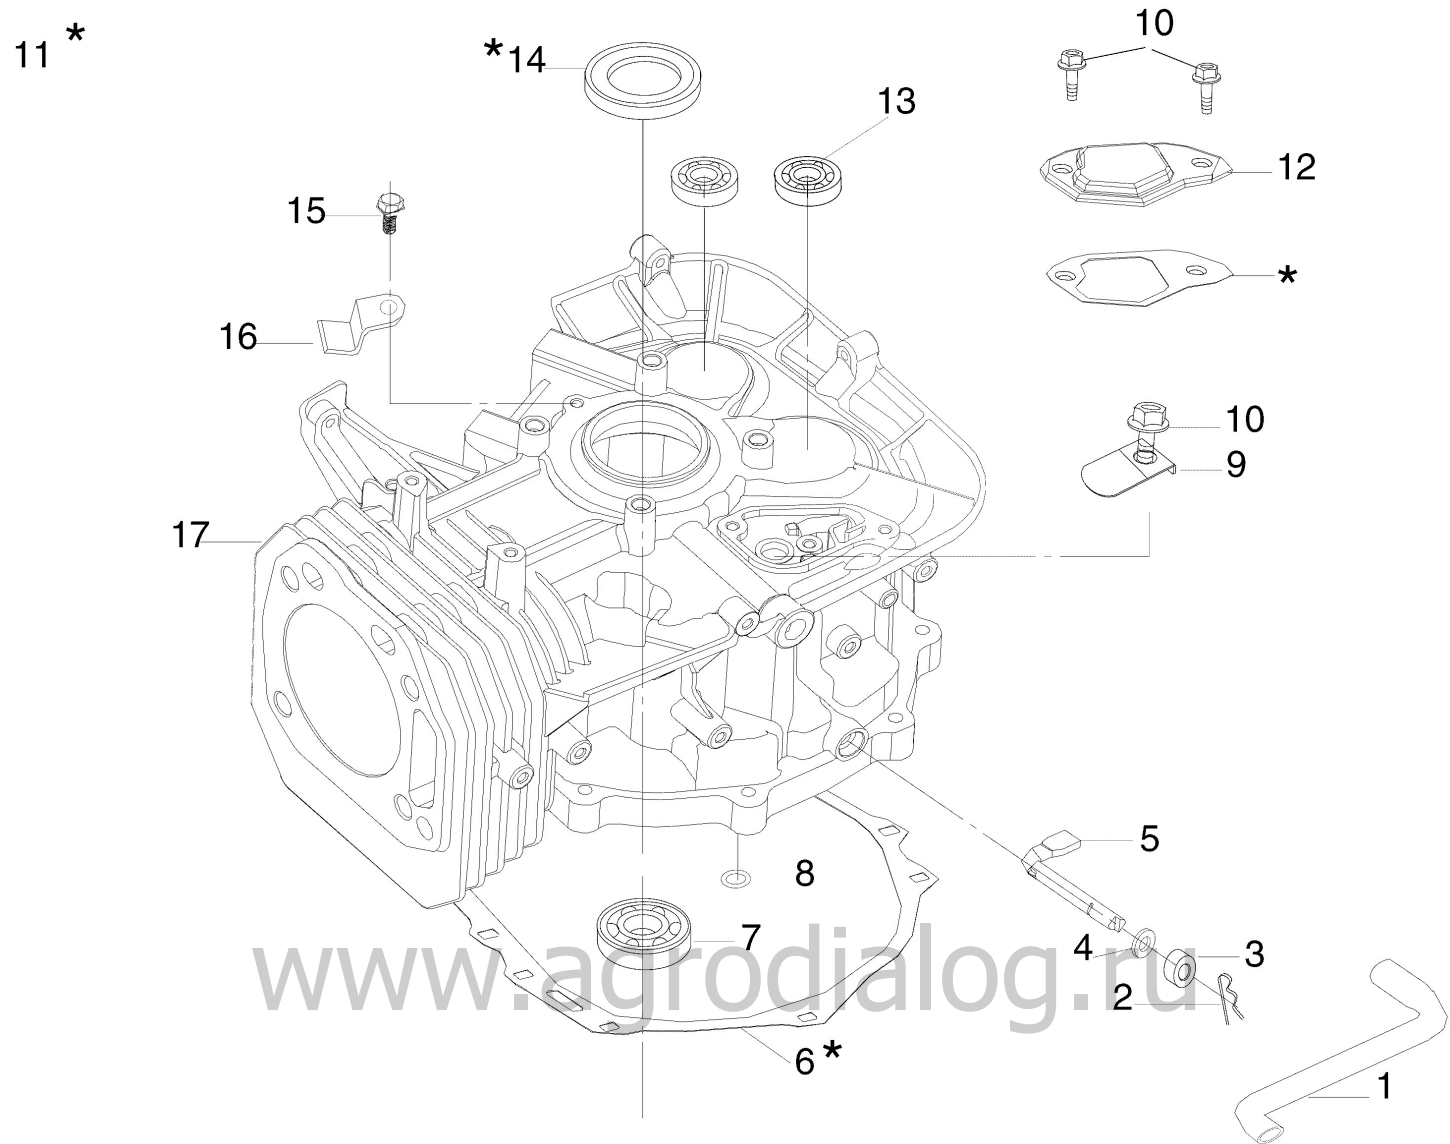

изображение Cylinder and crankcase

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151494	Breather fuel pipe				
2	1	L66150353	Goupille				
3	1	L66150660	Oil seal				
4	1	L66150824	Washer				
5	1	L66150794	Governor arm shaft				
6	1	L66150744	Gasket				
7	1	L66150665	Bearing				
8	1	L66150741	O-ring				
9	1	L66150410	Reed valve				
10	3	L66150464	Screw				
11	1	L66151179	Gasket set				
12	1	L66150745	Cover				
13	1	L66150829	Bearing				
14	2	L66150830	Oil seal				
15	1	L66150393	Screw				
16	1	L66150739	Valve				
17	1	L66151188	Crankcase				

www.agrodialog.ru